


kvm-tec First Aid

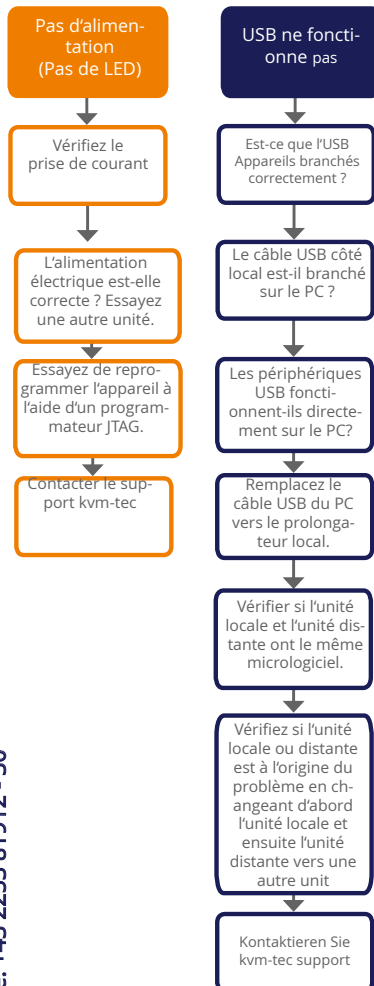

Update with USB-Stick

Plug the USB stick with update file into USB Flex.
 2. press the button on the back left (if PtP, the USB channel will be disconnected) ~ 4 sec
 3. wait until LED flashes orange (USB stick is scanned for updates) ~ 10-20 sec
 4. LED lights up specifically for 3 seconds
 LED red -> no update on stick found (remove stick and start at step 1)
 LED green -> Update found, ready to start
 5. press button again
 6. wait until the update is completed or an error occurs (for PtP local is updated first) ~ 2-3 min (PtP ~ 5-6 min)
 While update is running, LED flashes green, if data is transferred or copied, LED flashes very fast.
 At the end of the update, the LED flashes orange 4 more times and then starts the reboot process (the Extender must not be disconnected from the power supply during this process!)



flex
USB

KT-6031L CPU/LOCAL
KT-6031R CON/REMOTE

kvm-tec
Quick
Installation

kvm-tec Support
support@kvm-tec.com
Phone: +43 2253 81912 - 30

Nous sommes à votre disposition pour répondre à vos questions concernant l'installation?

Téléchargement du manuel www.kvm-tec.com

ou

kvm-tec Canal d'installation sur notre page d'accueil personnellement +43 2253 81912




Check out our Installation Channel:



www.kvm-tec.com

Full HD
over IP

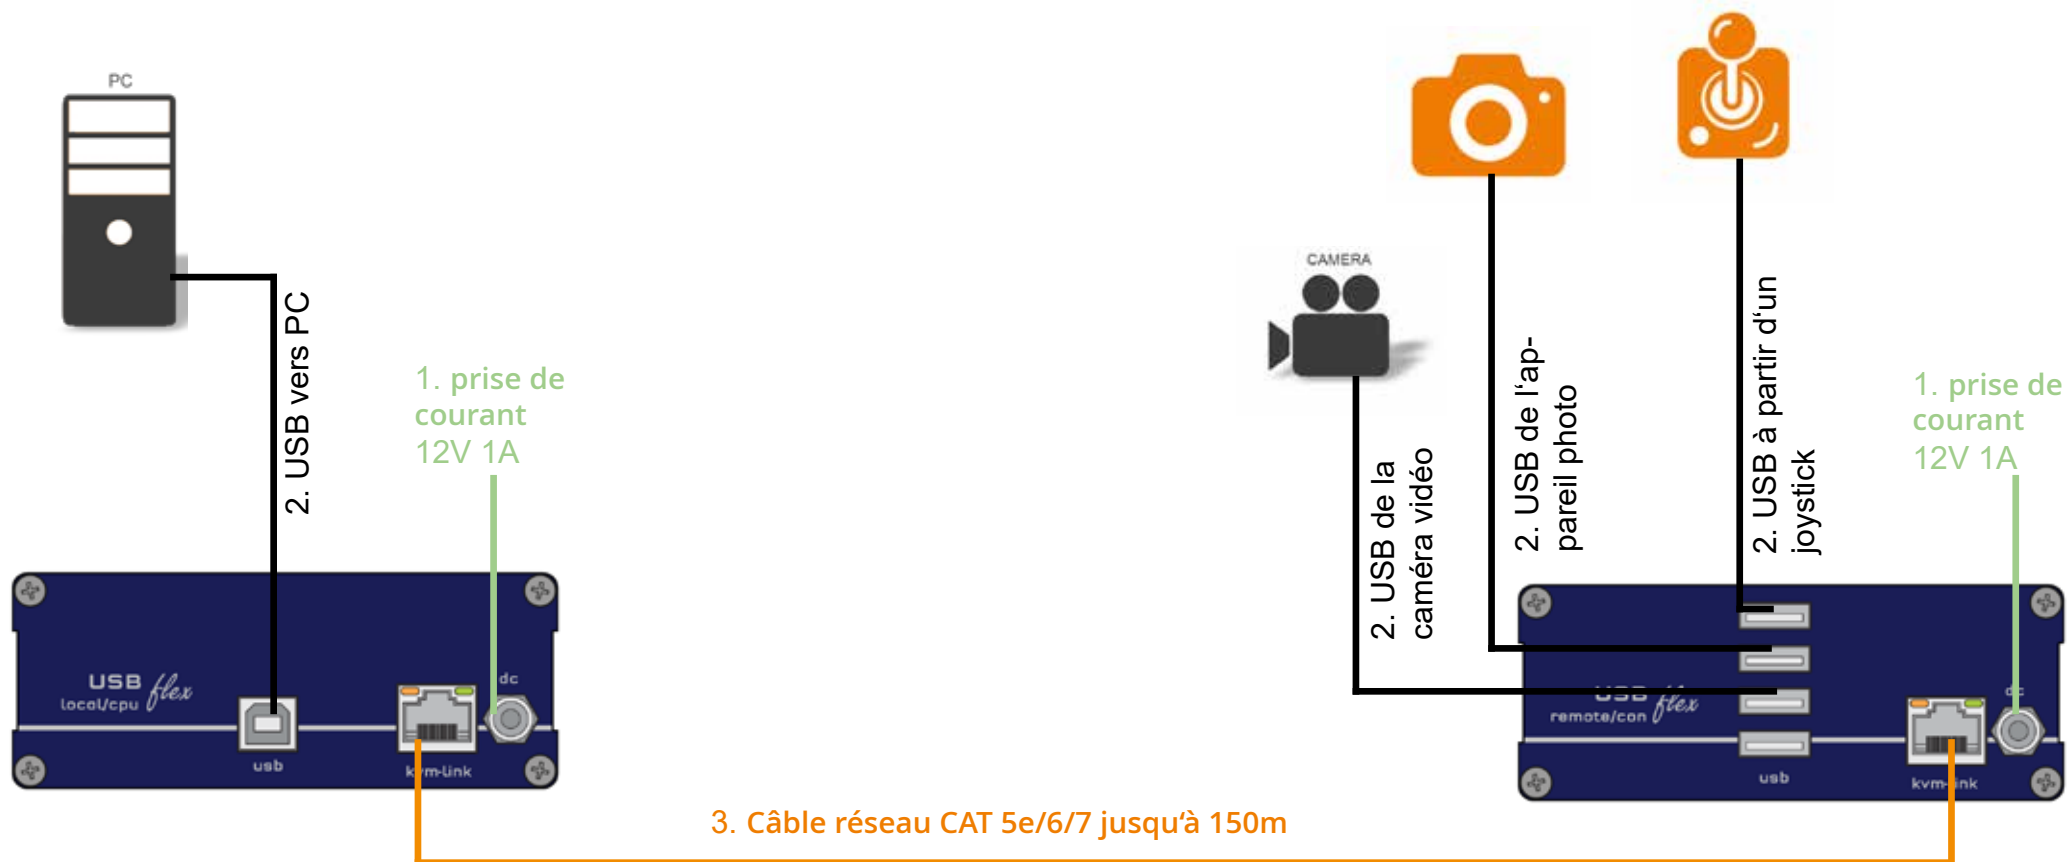

Quick Installation USBflex local / CPU – remote/ CON

1. Connectez le CON / Remote et le CPU / Local Unit chacun avec l'alimentation électrique 12V 2A fournie.
2. Branchez ensuite le câble USB à un port USB de votre PC et connectez l'autre extrémité du câble USB à l'unité centrale / locale. Ensuite, connectez les dispositifs USB au CON / Remote Unit.
3. Connectez le CPU / Local et le CON / Remote Unit avec le câble réseau.

Amusez-vous bien - votre extenseur est maintenant prêt pour de nombreuses années d'utilisation (MTBF environ 10 ans)