


Installation Instructions

PLS - Plasma Lift and Swivel

Design Highlights

- Unique Drop and Roll Flap Mechanism
- Full Cable Management
- Custom Sized to Suit Exact Size of Screen
- Multiple Preset Bi-Directional Swivel Mechanism

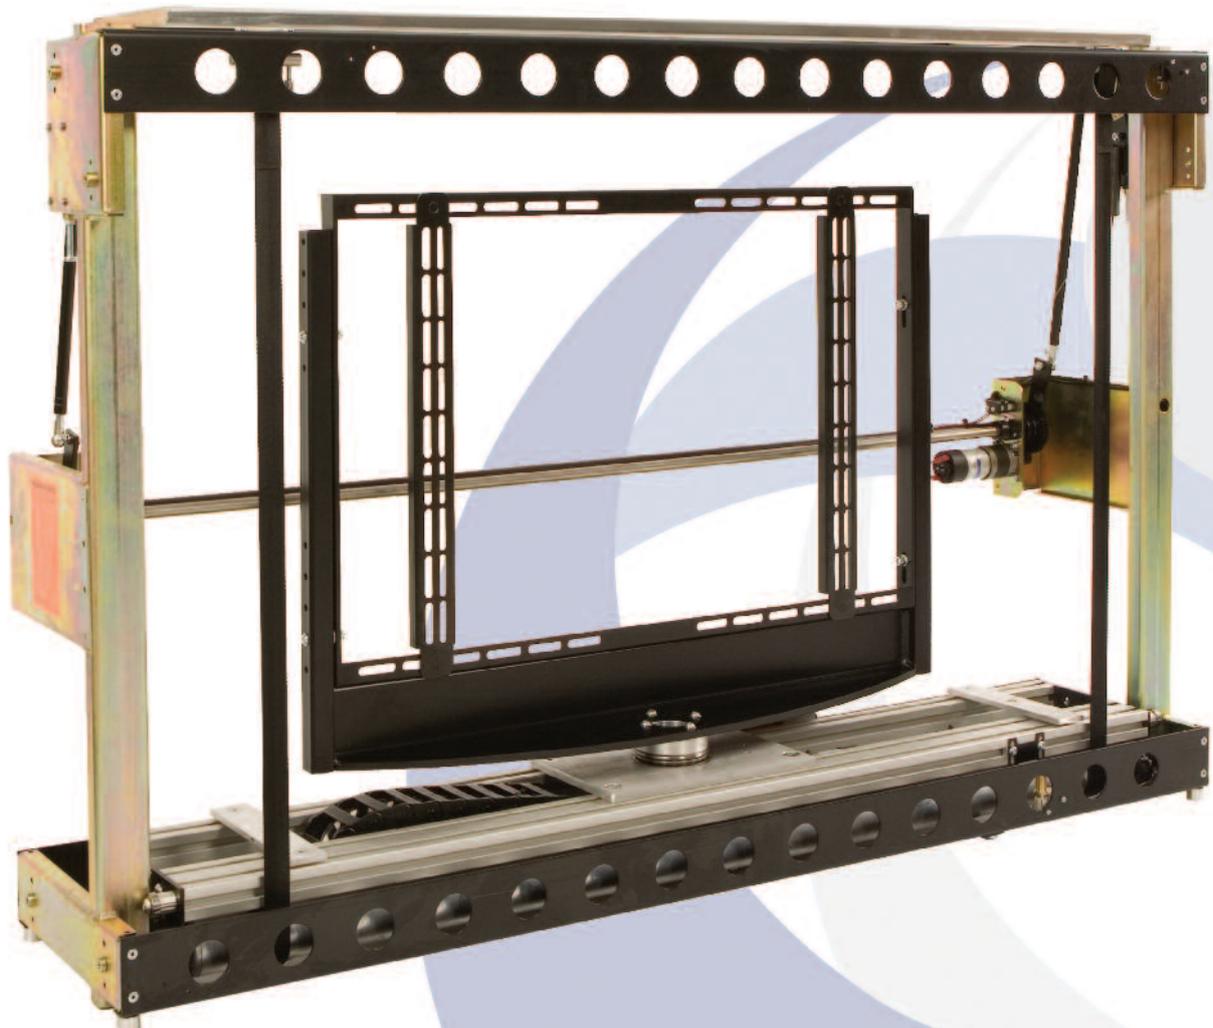

Thank you for choosing
futureautomation

PLS - Plasma Lift and Swivel



Caution
Warning



Beware of
Moving Parts



Danger
Electricity



Keep Hands
Clear

Safety Disclaimer

Important Safety Instructions

Explanation of graphical symbols

-(Electric Shock Symbol) = The lightning flash within an equilateral triangle is intended to alert you to the presence of un-insulated "dangerous voltage" within the products enclosure that may be of sufficient magnitude to constitute an electric shock to persons

-(Caution Symbol) = The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product

-(Tools Symbols) = The tools symbol within a coloured square are intended to highlight the required tools necessary for correct and safe installation of the product. These are intended as a guide only, and it is at the installer's discretion as to which tools are used.

WARNING: RISK OF ELECTRIC SHOCK, ONLY AUTHORIZED INSTALLERS TO OPEN THE POWER CONTROL BOX.

WARNING: To reduce the risk of fire or electric shock, do not expose electrical parts to rain or moisture, unless the product has been specifically designed to do so.

WARNING: Failure to provide adequate structural strengthening, prior to installation can result in serious personal injury or damage to the equipment. It is the installer's responsibility to ensure the structure to which the component is affixed can support the four times the weight of the component.

WARNING: Do not exceed the weight capacity. This can result in serious personal injury or damage to the equipment. It is the installer's responsibility to ensure that the total combined weight of all attached components does not exceed that of the maximum figure stated.

WARNING: Failure to provide adequate structural strength for this component can result in serious personal injury or damage to equipment! It is the installer's responsibility to make sure the structure to which this component is attached can support five times the combined weight of all equipment. Reinforce the structure as required before installing the component.

Warnings:

1. Read all technical instructions fully before installation and use. It is the installer's responsibility to ensure that all documentation is passed on to the end user and read fully before operation.
2. Keep all documentation.
3. Heed all warnings.
4. Follow all technical specifications and instructions during installation.
5. Do not use near water unless the product has been specifically designed to do so.
6. Clean only with a dry cloth.
7. Do not defeat the purpose of the polarized or grounding type plug. A polarized plug has two blades, one wider than the other. A grounding type plug has two blades and a grounding prong. The wide blade or third prong are provided for your safety. If the provided plug does not fit your outlet, consult an electrician or contact the manufacturer.
8. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where the exit from the apparatus.
9. Unplug the apparatus during lightning storms or when unused for long periods of time.
10. Only use attachments/accessories specified by the manufacturer.
11. Refer all servicing to qualified personnel. Servicing is required regularly on an annual basis, when the apparatus is damaged in any way, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
12. To completely disconnect the apparatus from the AC mains, disconnect the power cord plug from the AC receptacle on the power control box.
13. To prevent overheating, do not cover the apparatus. Install in accordance with the instructions.
14. UK, Ireland and Hong Kong only – The power cord is supplied with a 13A plug having an earthing pin. The apparatus is earthed and this pin is not required for safety, merely to operate the safety shutter of mains outlet.
15. No naked flames such as lit candles should be placed on the unit.
16. Observe and follow the local regulations when disposing of batteries.
17. Do not expose the unit to dripping or splashing fluids.
18. Do not place objects filled with liquid, such as vases, on the unit.
19. Do not expose the batteries to excessive heat such as sunshine, fire or the like.
20. For all mounted apparatus, the apparatus should be installed on solid wood, bricks, concrete or solid wood columns and battens.
21. Always turn off power at source before putting on or taking off parts and cleaning.
22. Do not use outdoors unless marked for outdoor use.
23. Exceeding the weight capacity can result in serious personal injury or damage to equipment.

Future Sound & Vision trading as Future Automation intend to make this and all documentation as accurate as possible. However, Future Automation makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without prior notice or obligation of any kind. Future Automation makes no representation of warranty, expressed or implied, regarding the information contained herein. Future Automation assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.


PLS - Plasma Lift and Swivel

Contents	Page
Introduction	
Safety Information	1
Contents	2
Contents	3
Tool Indicator Icons	3
Installation	
Parts List	
Package Contents	4
Stage 1	
Before You Start	5
Stage 2	
Fixings Flap Panel to the Mechanism	6
Stage 3	
Fixing the Lift in the Cabinet	7
Stage 4	
Adjusting the Top Stop Position	8
Stage 5	
Positioning the Base Panel	9
Stage 6	
Adjusting the Flap Up Position	10
Stage 7	
Adjusting the Flap Down Position	11
Stage 8	
Checking Screen Mount Suitability	12
Stage 9	
Mounting the Screen to the Lift	13
Stage 10	
Fixing the IR Sensor and Run the Mechanism	14
Stage 11	
Controlling the Mechanism	15
Stage 12	
Controlling the Mechanism	16
Electrical Connections	
Contact Closure	17
IR Controls	18
RF Controls	18
Operations	
IR Control	18
IR Operation	18
Storing Positions	19
Changing Batteries	19
RF Control	19
RF Operation	19

PLS - Plasma Lift and Swivel

Contents	Page
Trouble Shooting	20
Technical Overview	21
Notes	22

Tool Indicator Icons

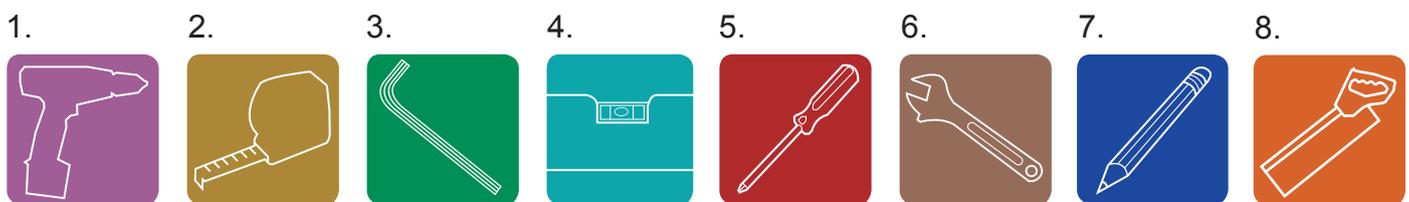

- | | | | |
|-------------------|-------------------|-------------------|-------------|
| 1. - Drill | 3. - Allen Keys | 5. - Screwdrivers | 7. - Pencil |
| 2. - Tape measure | 4. - Spirit Level | 6. - Spanners | 8. - Saw |

Product Warranty

This product carries a warranty that covers the cost of labour and spare parts incurred by any defects in materials and workmanship under normal use during a two year period from date of purchase. Support for any problems that are not hardware faults are excluded from the warranty entitlement. This warranty does not affect your statutory consumer rights.

The following is excluded from warranty service:

- Malfunctioning caused by misuse or damage, accidental or otherwise, or service modification by persons not authorised by Future Automation, or the use of any non Future Automation supplied parts;
- Any electrical, or other environmental work external to your Future Automation mechanism including power cuts, surges or lightning strikes;
- Additional items not supplied by Future Automation although they may have been supplied together by the retailer;
- Any 3rd party software products controlling your mechanism;
- Any transfer of ownership. Warranty is provided only to the initial purchaser;
- Compensation for loss of use of the product, and consequential loss of any kind;
- Use of the product over the specified weight capacity;
- Any damage to products during transit that is not checked and notified as "unchecked" or "damaged" upon receipt of delivery.

Any part of your system that needs to be replaced during a warranty repair becomes the property of Future Automation.

PLS - Plasma Lift and Swivel

Package Contents


- 1 - Mechanism
- 1.1 - Flap
- 1.2 - Screen Mount
- 1.3 - Cable Management
- 1.4 - Lifting Beam
- 2 - Control Box
- 3 - Remote Control

Not Shown On Page

- 4 - x2 AAA Batteries
- 5 - Multi Pack Of Nuts, Bolts & Washers
- 6 - Mains Power & Other Leads

Nuts & Bolts Multipack:

A range of nuts, bolts, washers and spacers to help add in the mounting for your screen

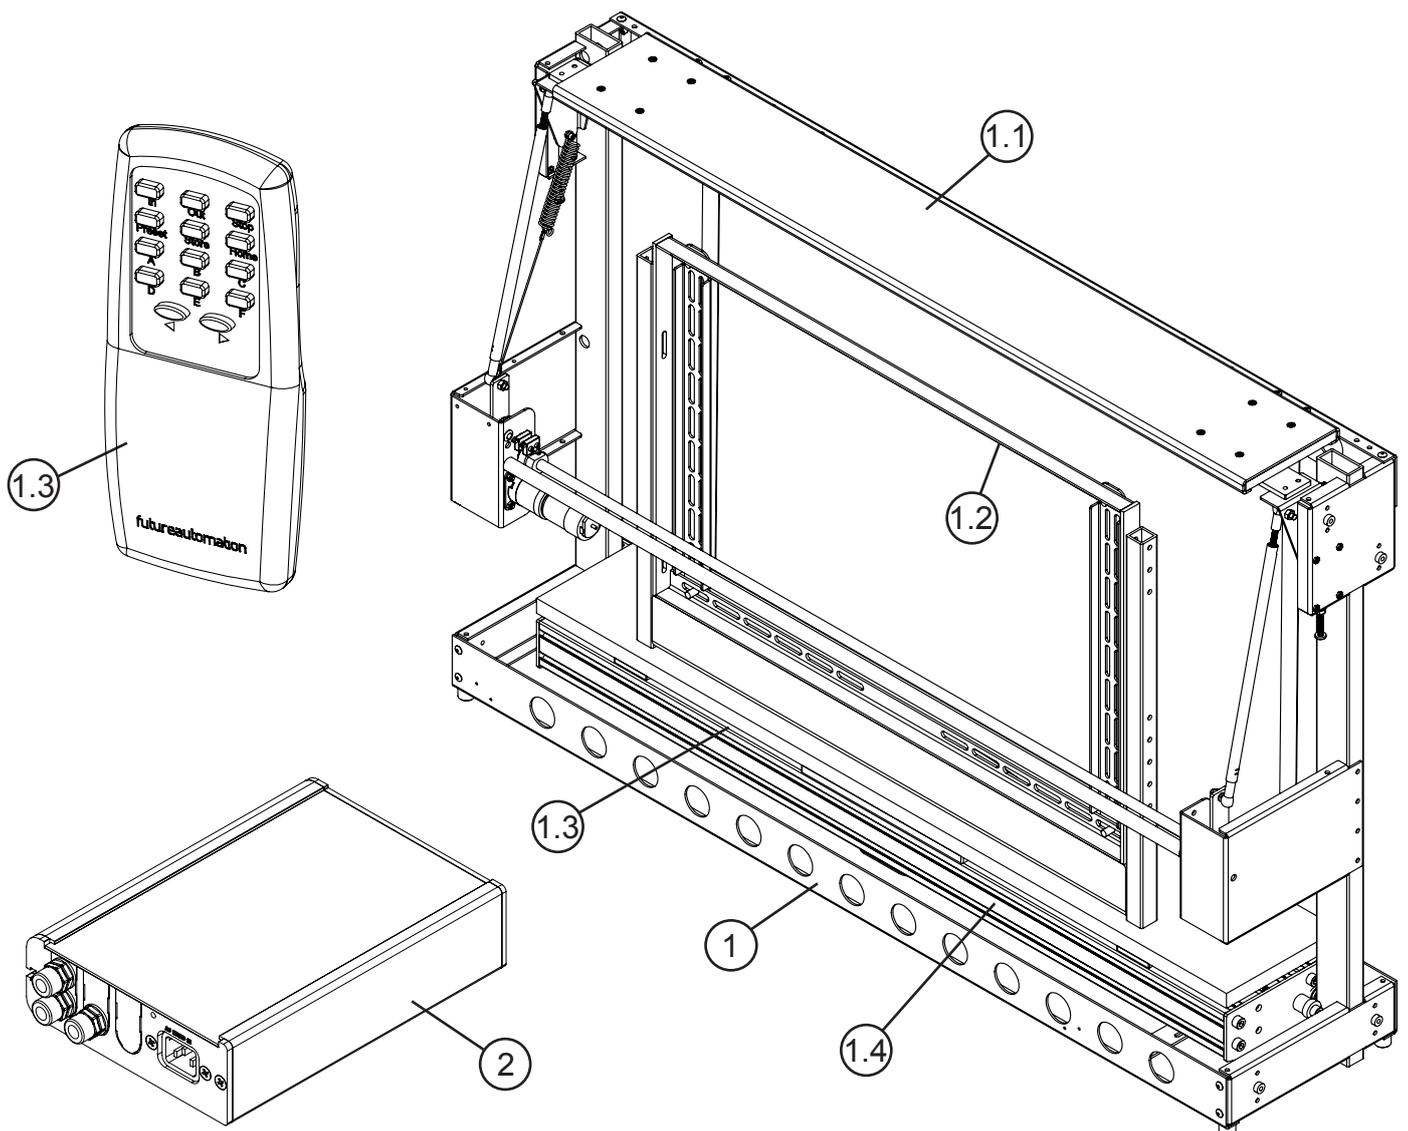

PLS - Plasma Lift and Swivel



Before you Start


Check the Operation of the Mechanism.

Firstly, remove all the red cable ties which keep the mechanism safe and secure during transit. There are usually 6 ties in the locations circled on the image.

However, on some models there may be more than 6 cable ties.

Once they have all been removed, the mechanism can be powered up and tested.

Connect the supplied IR remote and check that the mechanism operates correctly before continuing with the installation.

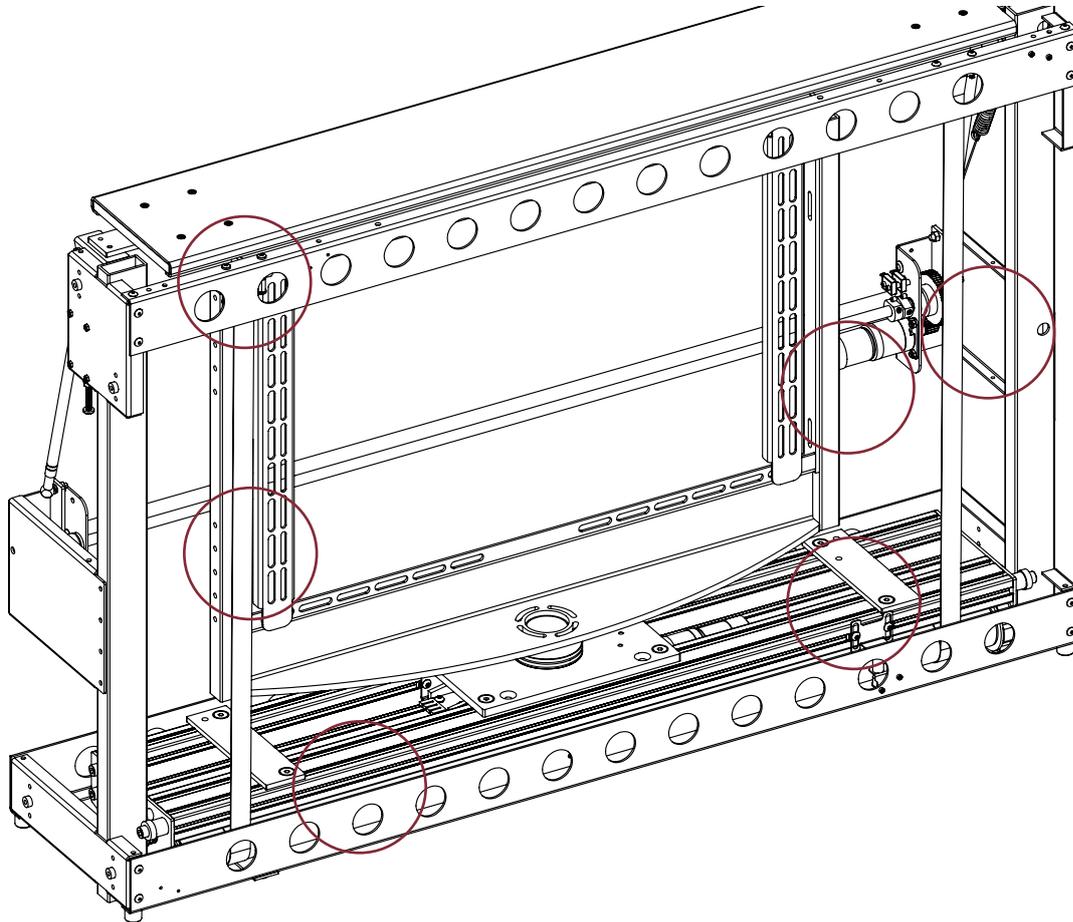

IMPORTANT


When testing the mechanism, make sure that the straps that pull the lifting beam up are not in any way twisted. They must remain perfectly straight from top to bottom. If this is not the case, then take care when straightening. Also make sure that the straps are stacking neatly when wrapping around the tubes.

PLS - Plasma Lift and Swivel




Fitting Flap Panel to the Mechanism

The 6mm flap and the base should be made as part of the cabinet. The surfaces of the flap should ideally be varnished or painted to help prevent it from warping.

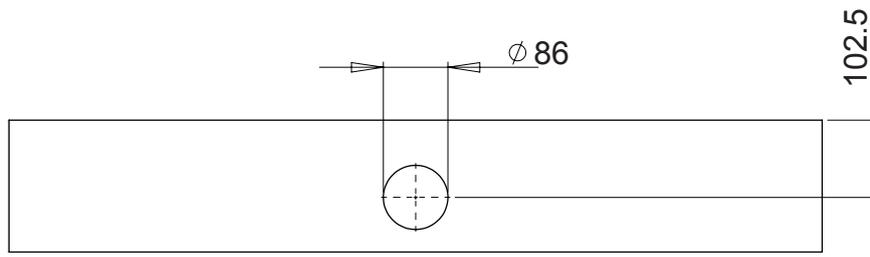

One large hole to be drilled in base panel. This hole should be 86mm diameter to allow for adjustment later. The hole's centre has to be 102.5mm away from the front edge of the base panel. Depth of base panel depends on mechanism size, e.g. 275 or 320.

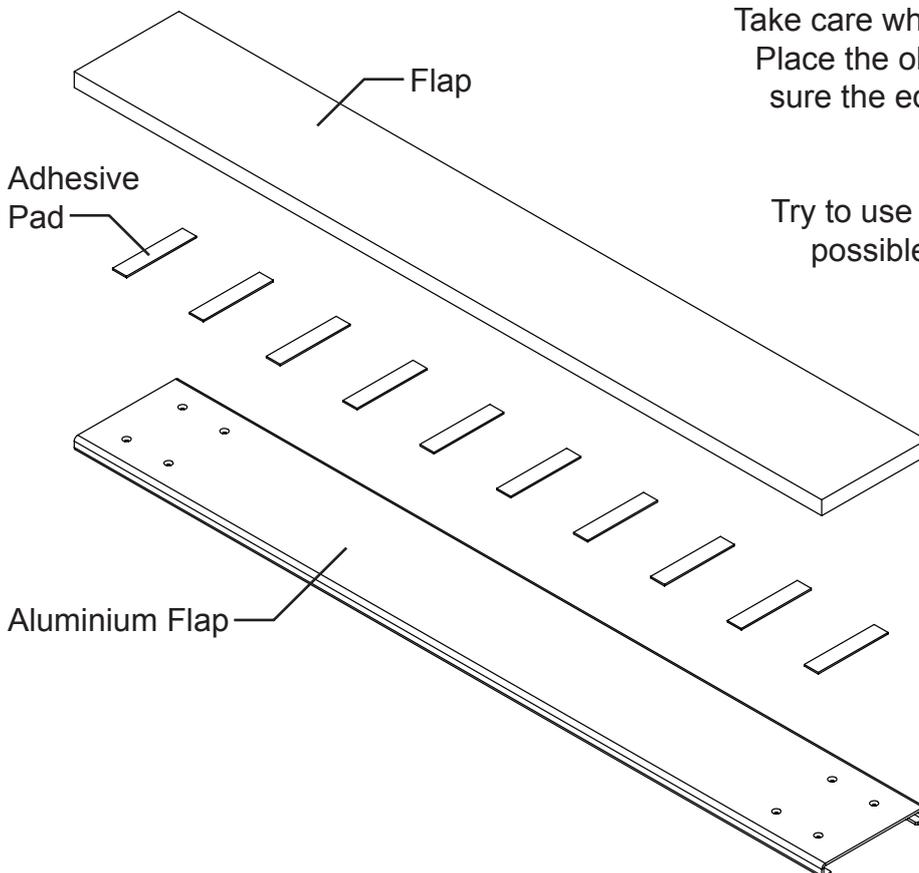

Take care when fixing the surfaces together. Place the objects on a flat surface to make sure the edges are properly aligned when they come into contact.



Try to use as many self adhesive pads as possible to get the most secure fixture.

PLS - Plasma Lift and Swivel



Fixing the Lift in the Cabinet


Place the mechanism within the cabinet.
Raise the beam to the top and carefully guide the base through the opening in the top.

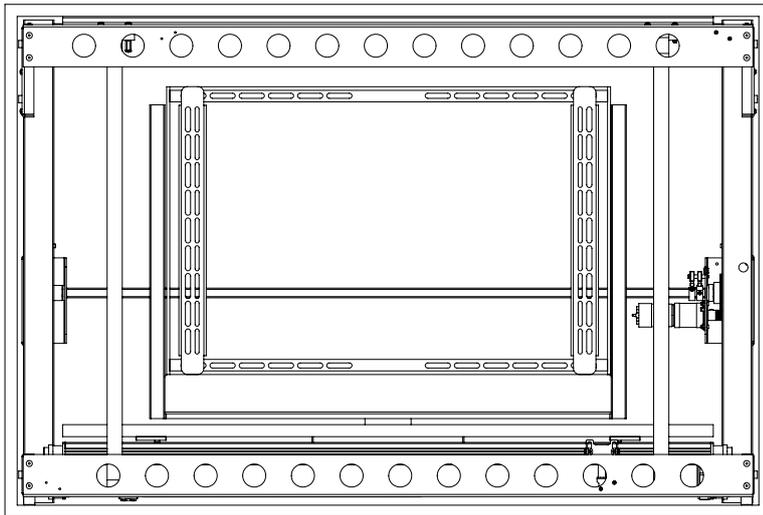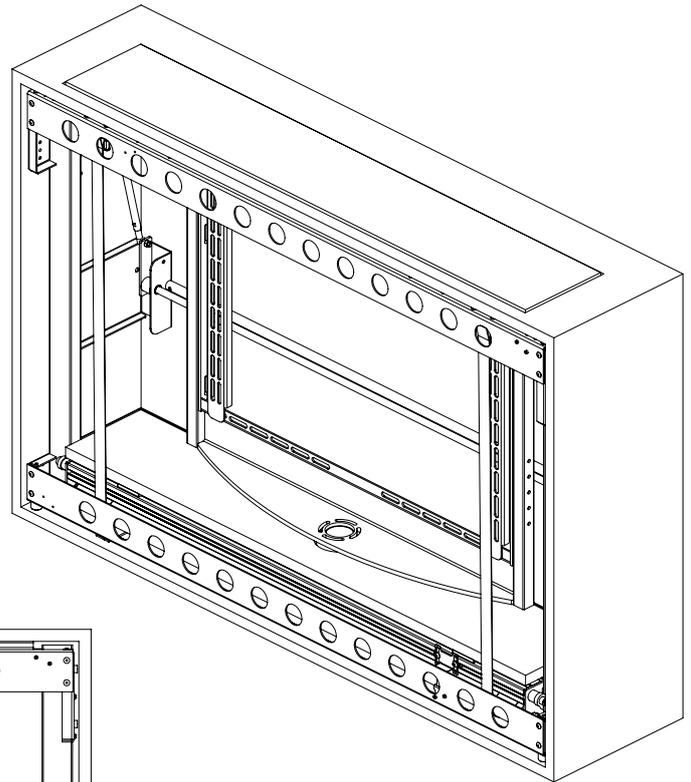

Place the mechanism within the cabinet.
Raise the beam to the top and guide base through the opening in the top. IR remote STOP button will stop the lift.

With the base properly located, use the 8 screws supplied, 4 on each side, to pin the mechanism in place, fixing its position left and right. These 8 screws should be screwed through the middle hole of each of the clusters of 3, shown below right.

With the lift fixed in position, use 8 wood screws on each side to secure the lift to the cabinet.

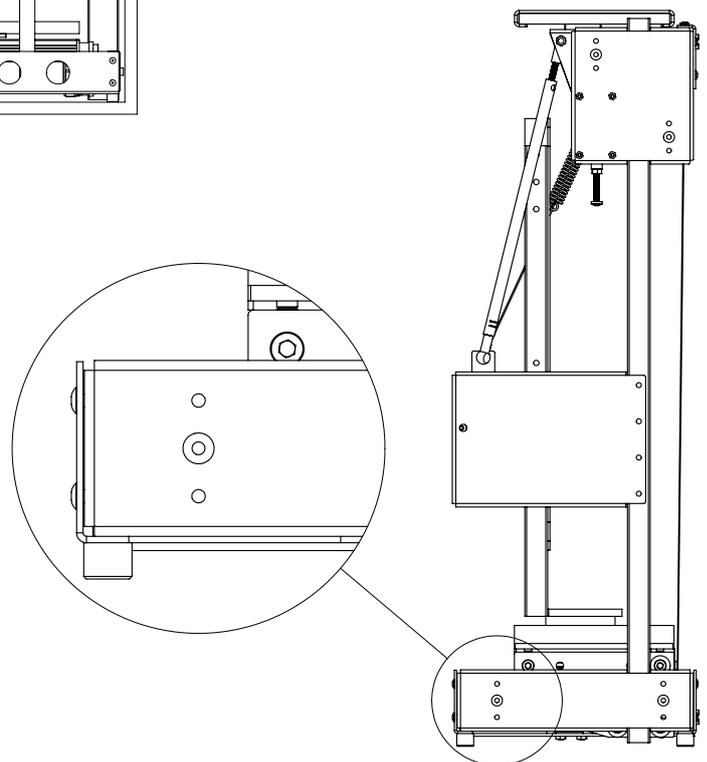


PLS - Plasma Lift and Swivel




Adjusting the Top Stop Position


By adjusting the white screw up or down, you can adjust the stop height of the lifting beam and also, the base panel.

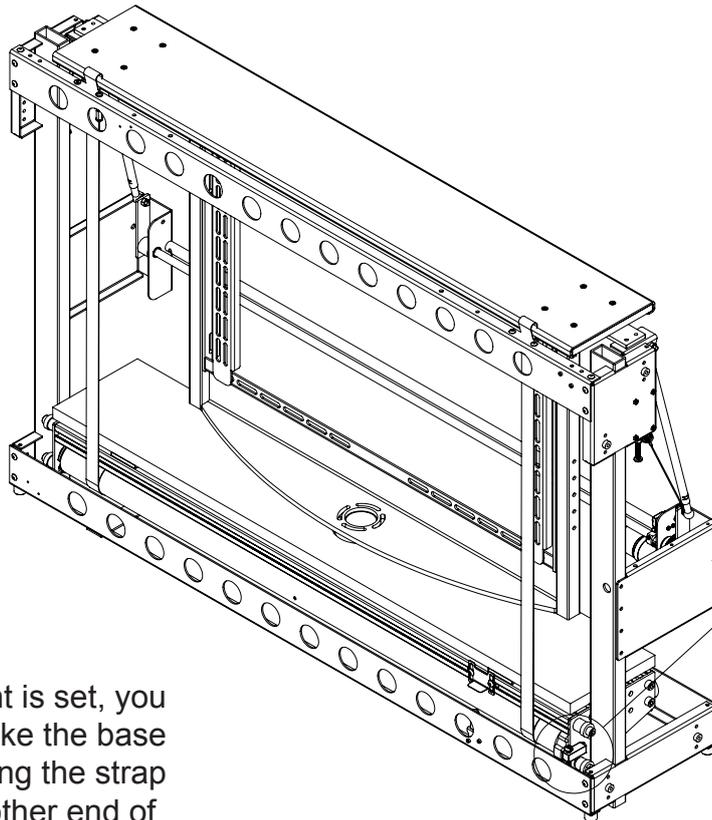

Once the height is set, you will need to make the base level by adjusting the strap hanger at the other end of the lift, shown to the left.

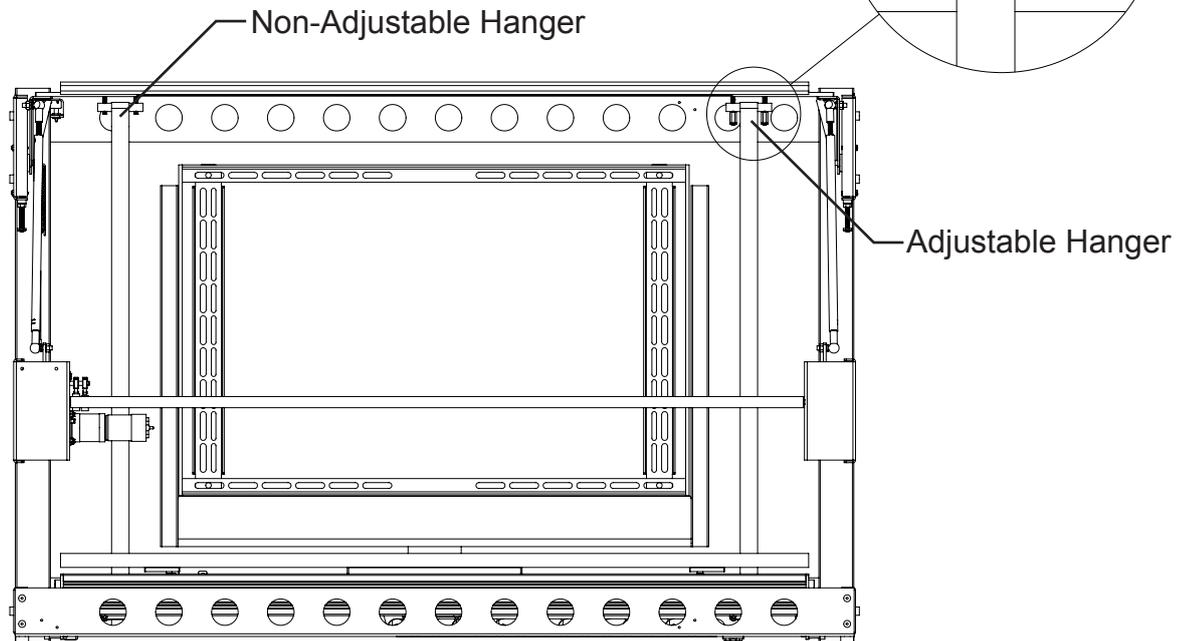

PLS - Plasma Lift and Swivel


 


Positioning the Base Panel

Loosen off the frame and move the base to the centre of the opening. There should be a gap of about 3mm around the edges of the base panel to the cabinet.

Pass the cables up through the swivel unit and base to the screen.
Secure the base in place from the underside through the two fixing brackets.

Remove the screen mount from the mechanism and put the base on the beam. With the base panel on the beam, it will be possible to mark where the wood screws will need to go through the support plates into the base panel. Mark where the holes need to go and then drill a pilot hole for the screws. Then screw in the provided wood screws with washers.

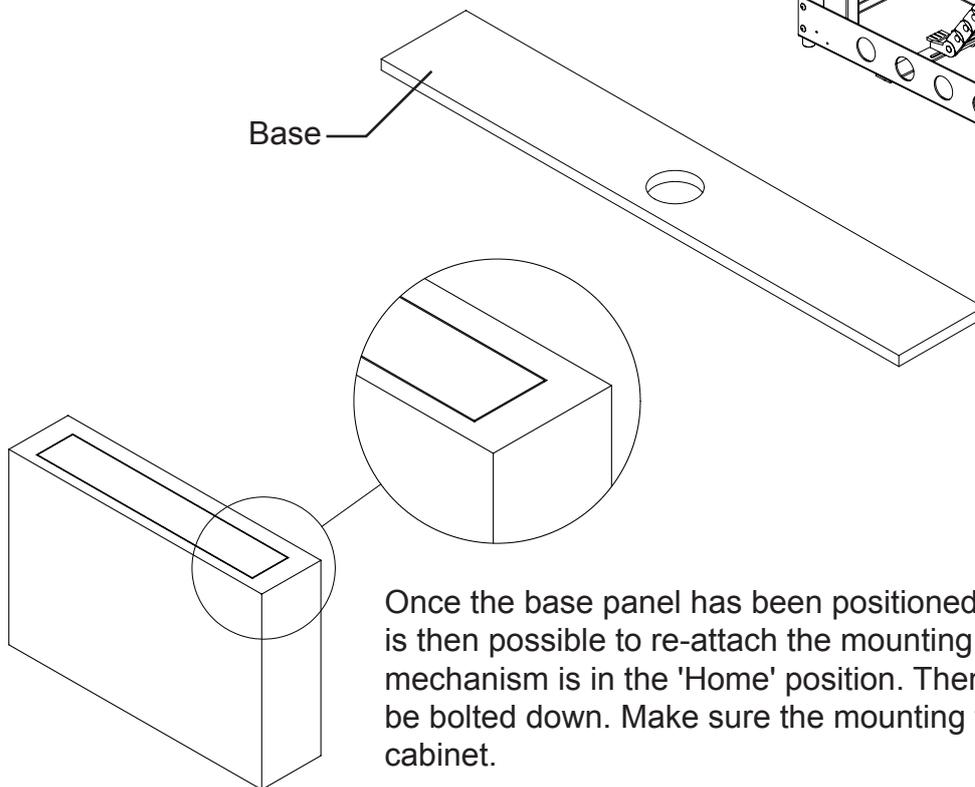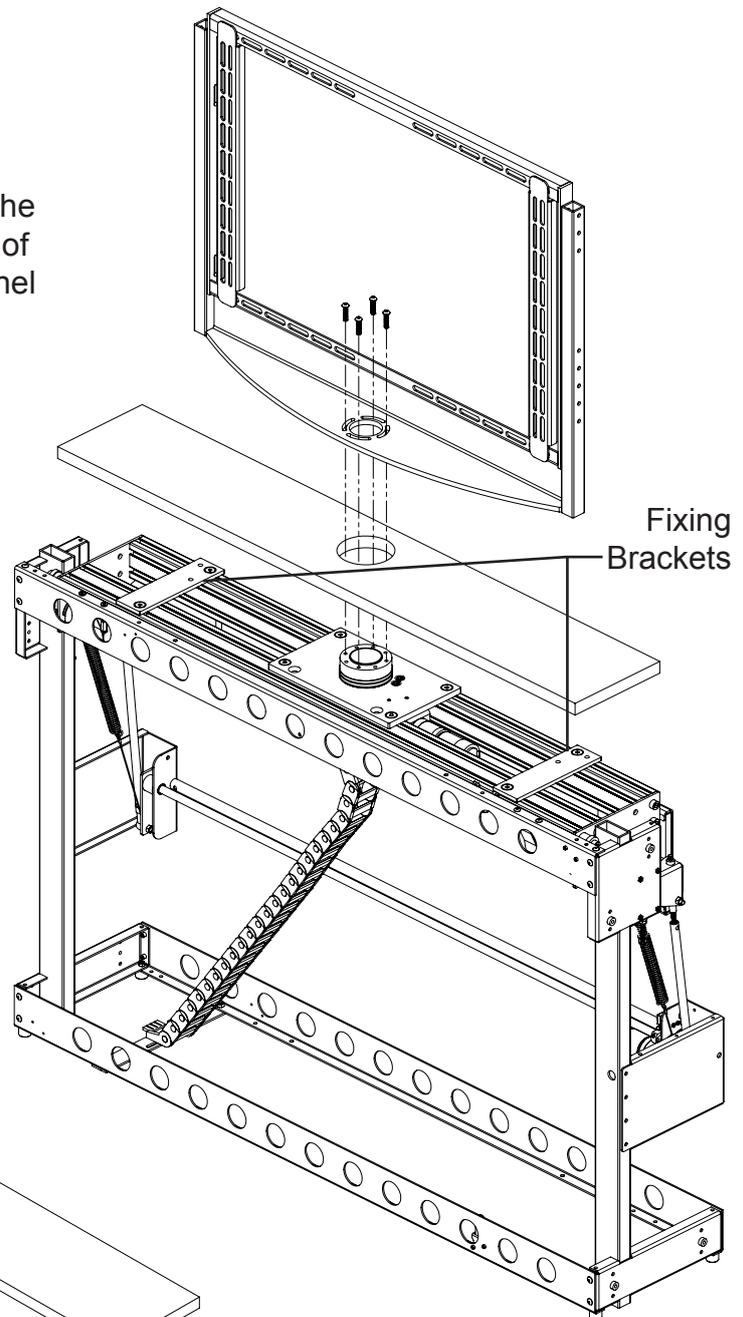

Once the base panel has been positioned correctly and properly secured, it is then possible to re-attach the mounting frame. Firstly make sure the mechanism is in the 'Home' position. Then the screen mounting frame can be bolted down. Make sure the mounting frame is square with the slot in the cabinet.


Consult PLS TECHNICAL SHEET before fabricating any flaps or base panels.

PLS - Plasma Lift and Swivel






Adjusting the Flap Up Position

By adjusting the white screw, at each side of the lift, you can adjust the tilt of the flap.

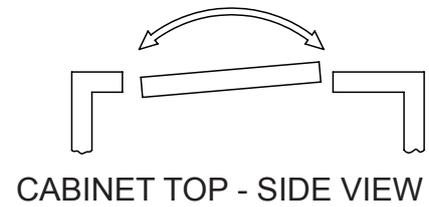


 By loosening the M6 bolts on each side under the flap, you can adjust the position of the flap in the hole in the cabinet top. Aim for a 3mm gap all round.

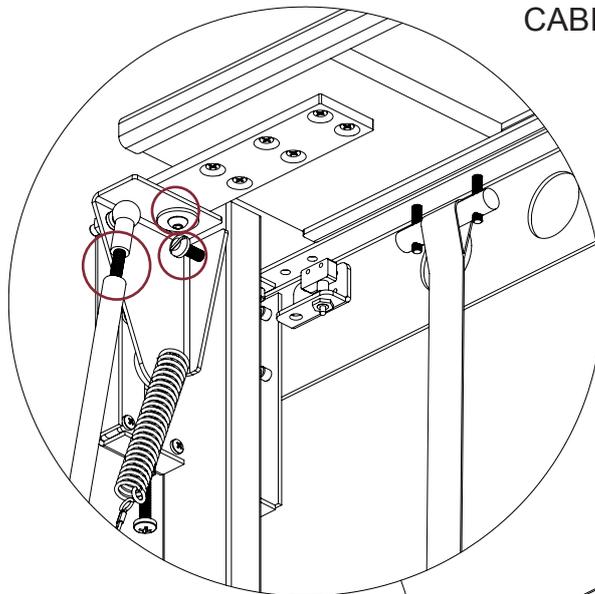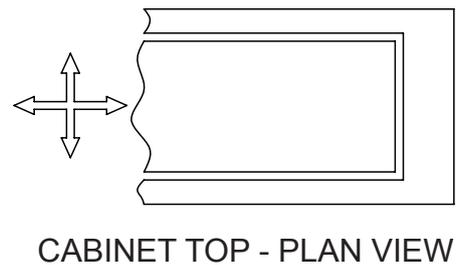

CABINET TOP - SIDE VIEW



By winding the push rods on each side, you can adjust the height of the flap in order to get it level with the cabinet top. Be sure to lock the nut securely once adjusted. Make sure the black plate doesn't touch the inside of the cabinet. This can cause strain on the motor, leading to failure.

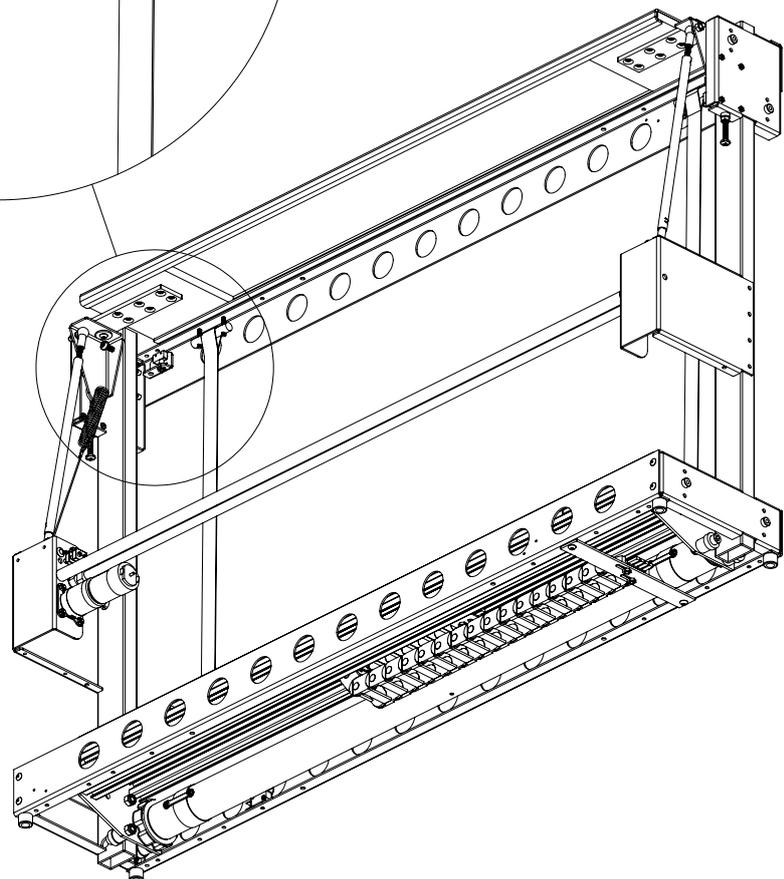


PLS - Plasma Lift and Swivel



Adjusting the Flap-Down Position

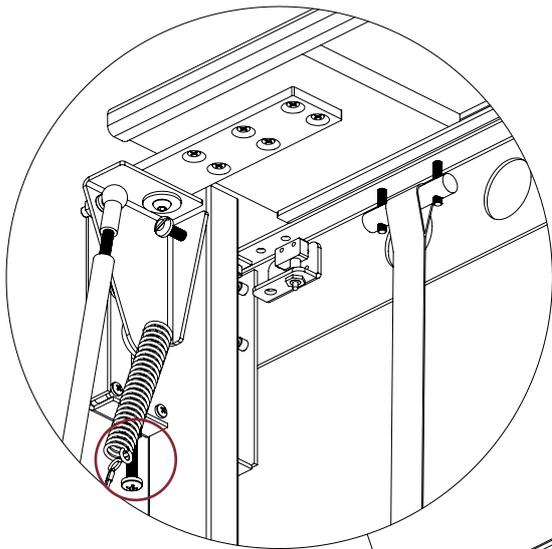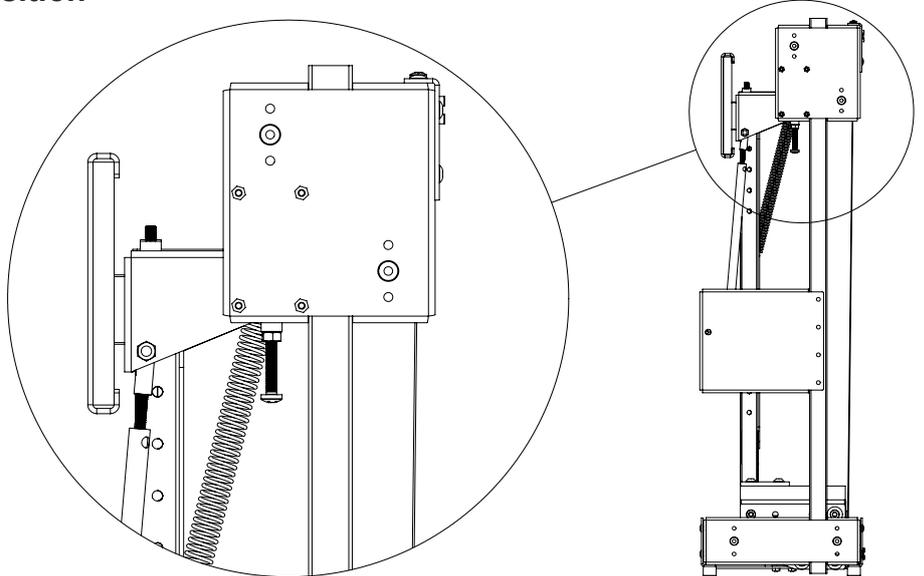

By adjusting the bolts under each flap arm, it is possible to alter the angle the flap opens to. It is very important that when the flap is open, it rests in a vertical position, as shown above.

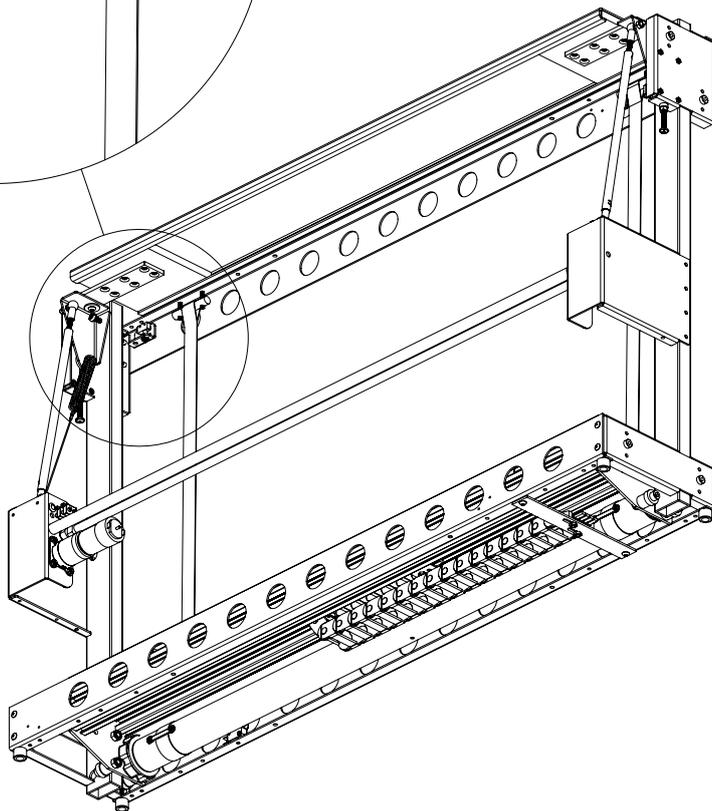

PLS - Plasma Lift and Swivel




Checking Screen Mount Suitability

With a standard plasma lift, the supplied mounting type will be either a Group A or C framework, or a VESA 200 mount. Check that the type supplied suits the screen that is going to be mounted to the mechanism.

VESA 200 Mount


Remove the screen plate, and fix it to the back of the screen using the appropriate fixings.

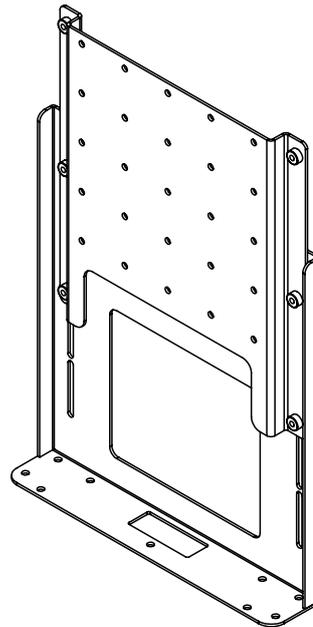

PLS Group A

Remove the uprights, highlighted above and fix them to the back of the screen using the appropriate fixings.

If these screen mounts are unsuitable to secure your screen, a custom mount plate can be designed.

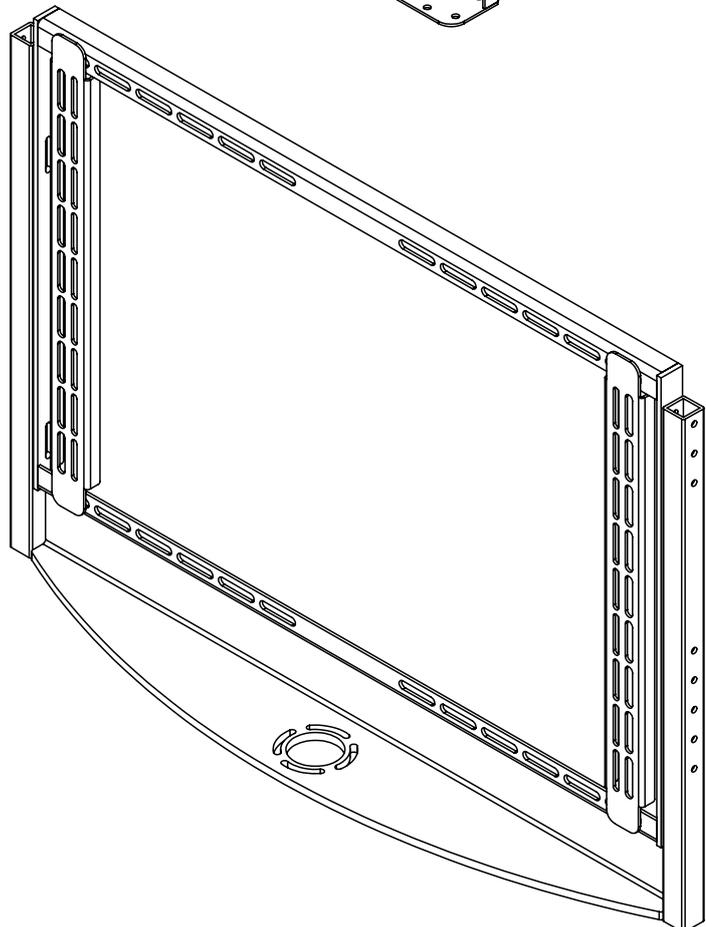

PLS - Plasma Lift and Swivel





Mounting the Screen to the Lift

Before mounting any screen, press STOP on the IR remote in order to prevent any motor movements during the mounting procedure.



Make sure the mechanism is in the HOME position.


Simply mount the screen on to the mount supplied with your mechanism. The example below shows a Group A framework.

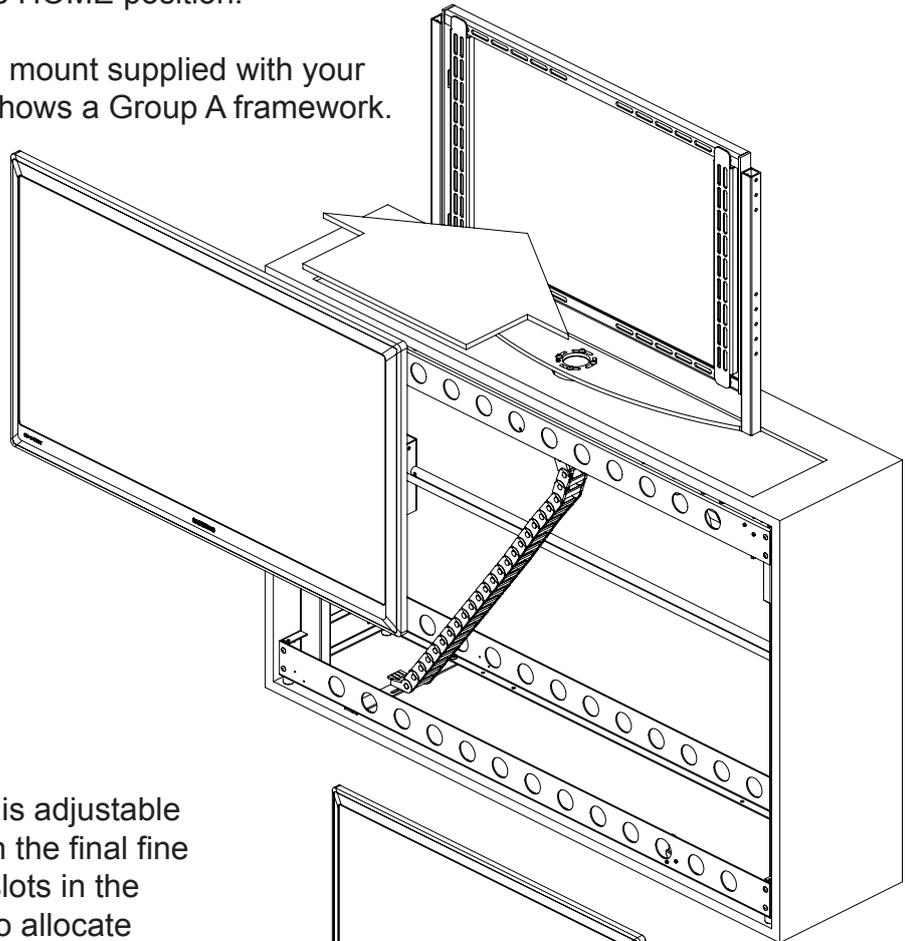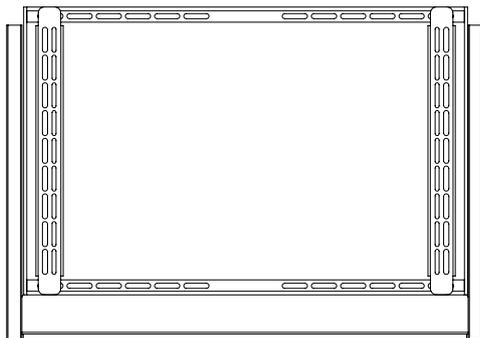

The height of the inner framework is adjustable in 30mm increments. There is then the final fine adjustment available from 30mm slots in the side. The inner uprights will slide to allocate different mounting systems.

When the screen is in position, the cables can be connected and run down into the cabinet.

Pass the cables through the hole you cut in the base for the cables. Once inside the cabinet, pass the cables in to the cable management system. This resembles a black chain running from the beam to the base of the cabinet that the cables can be pushed inside to keep them tidy.

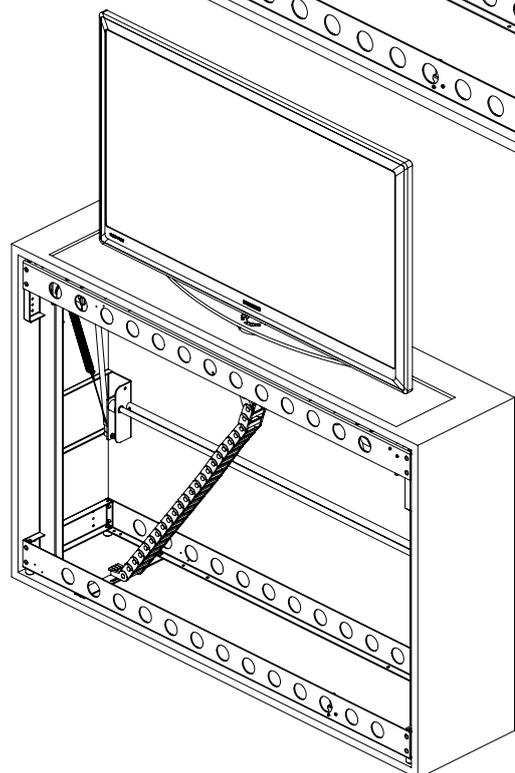


PLS - Plasma Lift and Swivel



Fix the IR Sensor and Run the Mechanism

The IR sensor can be located anywhere outside of the cabinet.

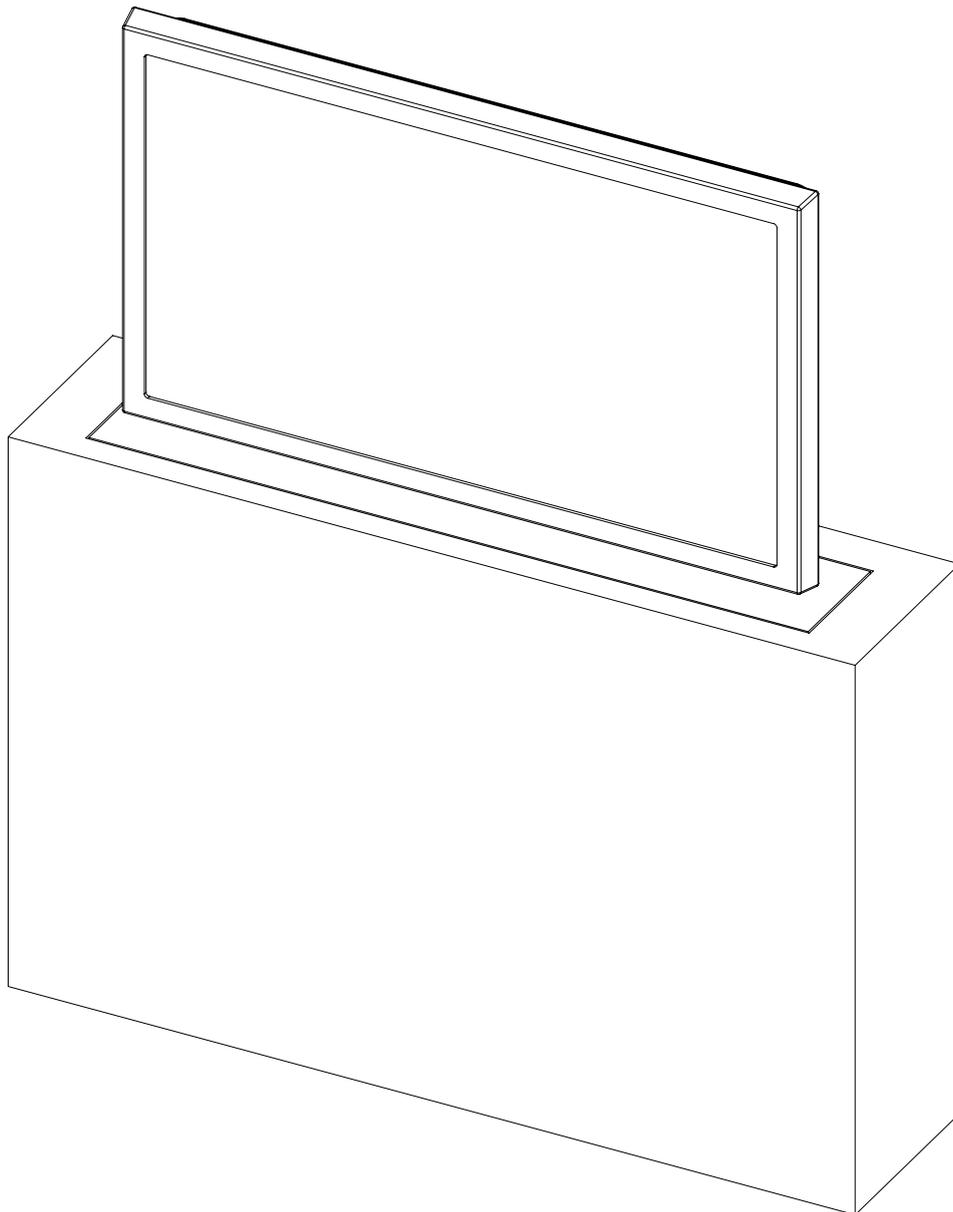

It is very important that once the mechanism is set up, the lift is run up and down a number of times to allow the straps to bed in and stabilise.

It may then be necessary to re-adjust the height and / or level of the lifting beam, as first discussed in Stage 4 of these instructions.

PLS - Plasma Lift and Swivel



Controlling the Mechanism

IN - Takes the screen inside the cabinet

OUT - Takes the screen out of the cabinet facing forward

STOP - Stops the mechanism at any time

PRESET - Screen goes to learnt position

STORE - Programs current screen position to learnt position

HOME - Takes screen to forward facing position when screen is already in an angled position

< - Rotates screen left

> - Rotates screen right


STORE + PRESET - Within 1 sec stores preset position

STORE + E - within 1 sec clears preset and sets swivel 180 degree right and left

STORE + D - within 1 sec sets left limit

STORE + F - within 1 sec sets right limit

STORE + A-C - stores other positions A-C then takes it to those positions

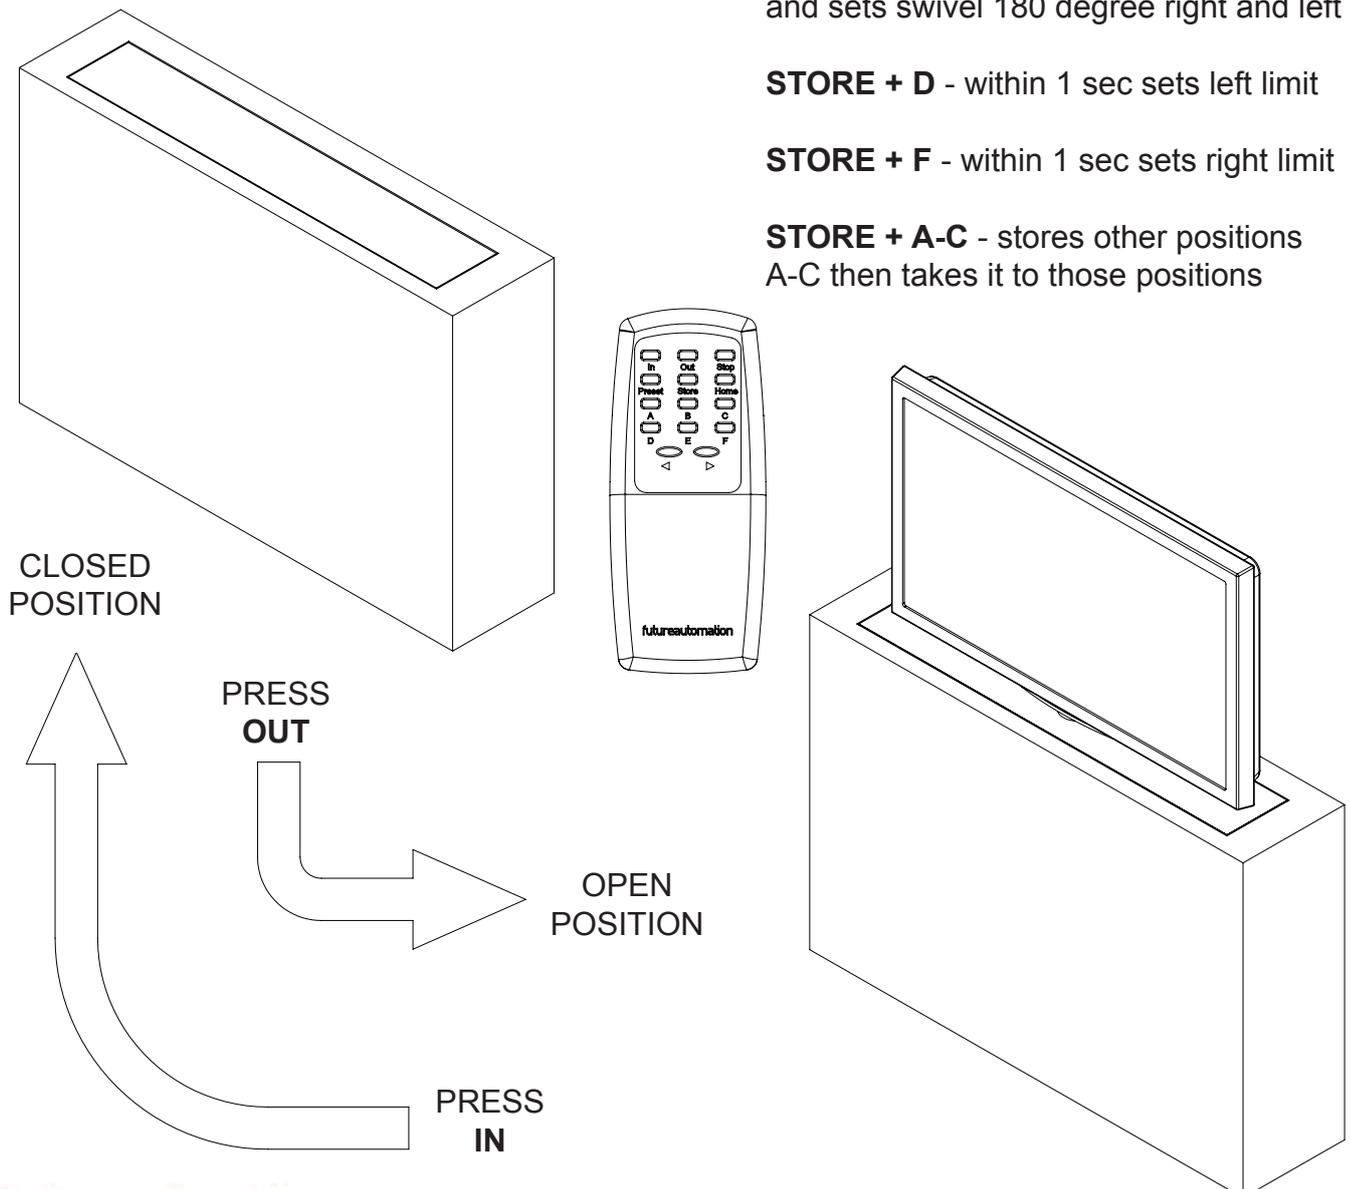

PLS - Plasma Lift and Swivel



Controlling the Mechanism


Programming new memorised positions.

The example, shows the programming of a position that is left of centre.

In order to program a position that is right of centre, simply press **>** to turn the screen to the right.

Then press **STORE + PRESET** to store the position in the memory.

STORE + A-C Also stored positions

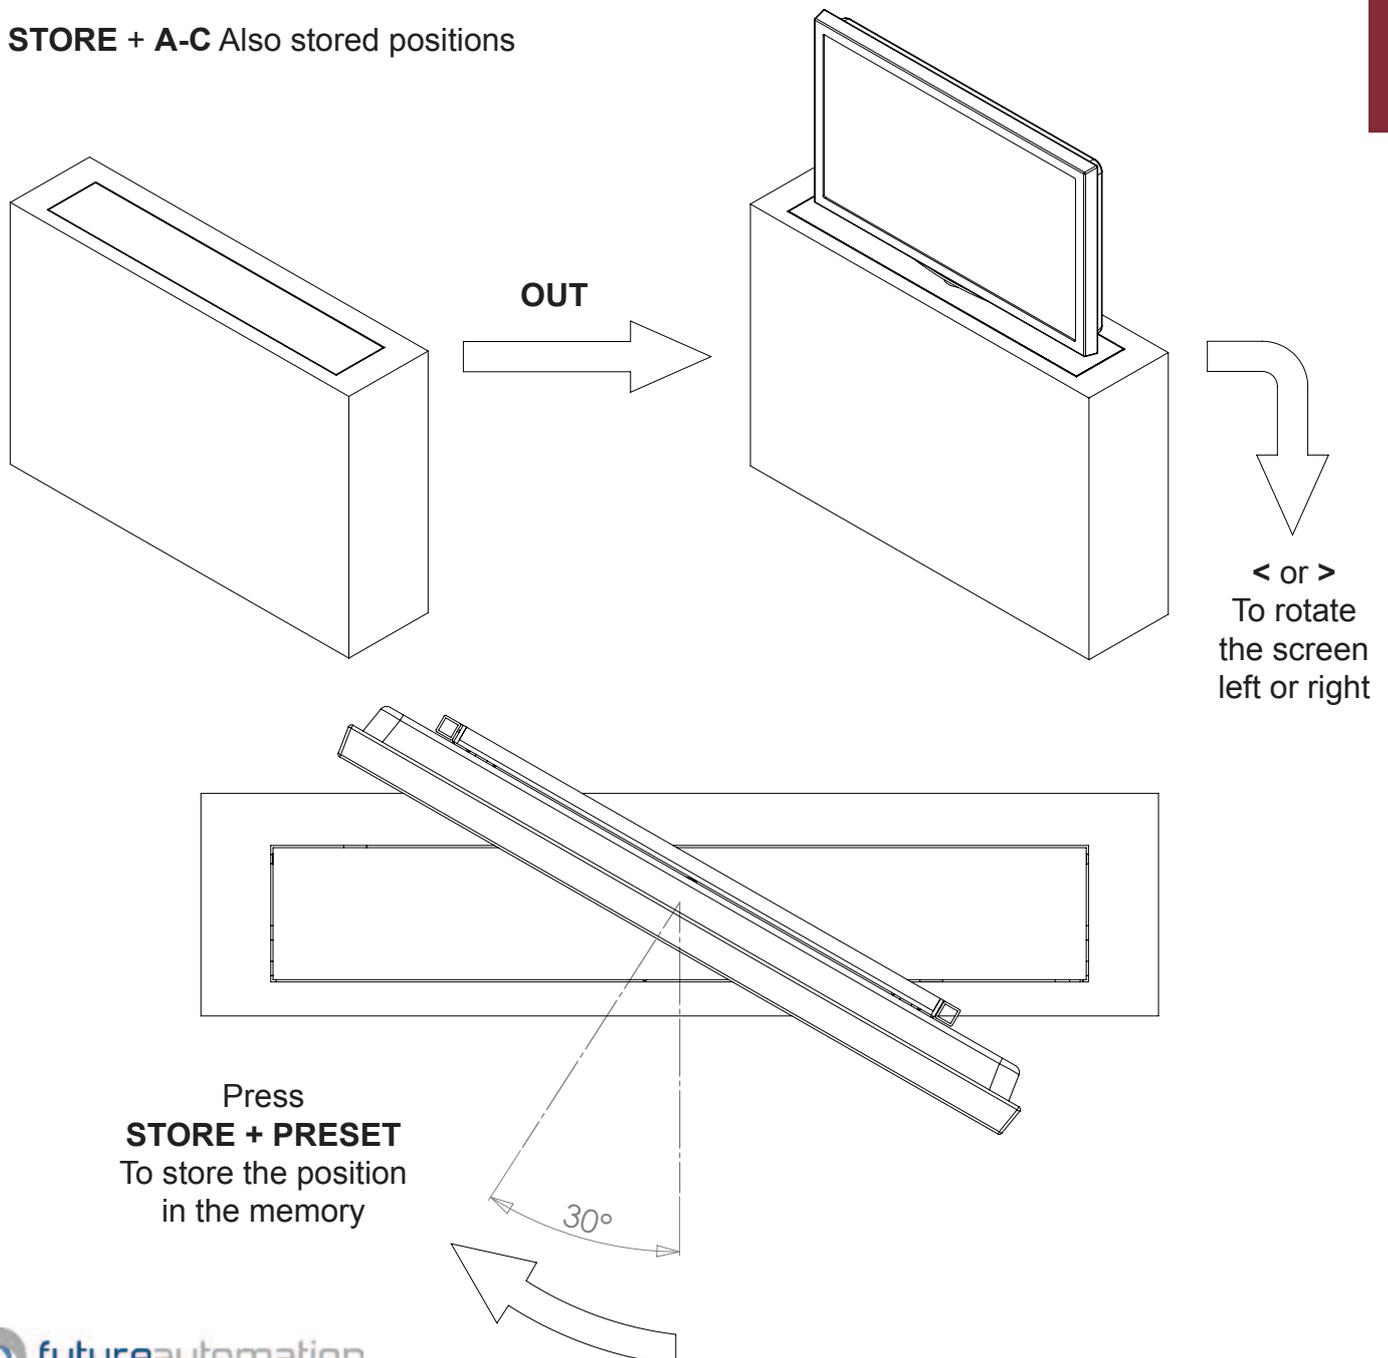


PLS - Plasma Lift and Swivel



Contact Closure

- Use an RJ45 connector in the CCI socket on the control box to operate via contact closure

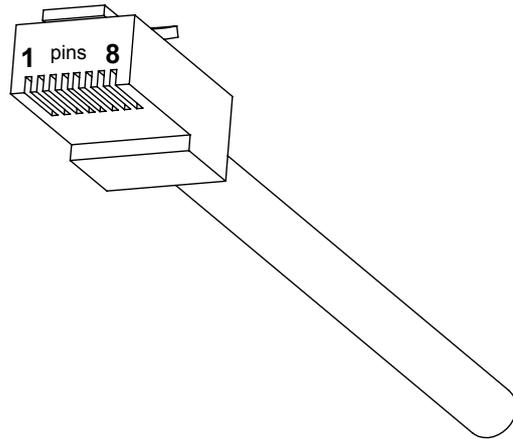


PIN	DESCRIPTION	ACTION	WIRE / CABLE		CONTACT CLOSURE LED INDICATOR
			568A	568B	
1	12V SUPPLY	12V SUPPLY - CURRENT LIMITED	W/G	W/O	
2		PIN 2 NOT USED	G	O	
3	GROUND	GROUND	W/O	W/G	
4		PIN 4 NOT USED	BL	BL	
5	DEVICE LEFT	Momentary short to GROUND (pin 3), will make device go LEFT.	W/BL	W/BL	LED 4
6	DEVICE RIGHT	Momentary short to GROUND (pin 3), will make device go RIGHT.	O	G	LED 3
7	DEVICE HOME	Momentary short to GROUND (pin 3), makes device go OUT / HOME.	W/BR	W/BR	LED 2
8	DEVICE IN	Momentary short to GROUND (pin 3), makes device go IN.	BR	BR	LED 1



Any contact closure input whilst the mechanism is in motion will stop the movement and all other contact closure commands will be disabled for 1 second.



NOTE: Earlier versions of the control board may not have these contact closure LED indicators.

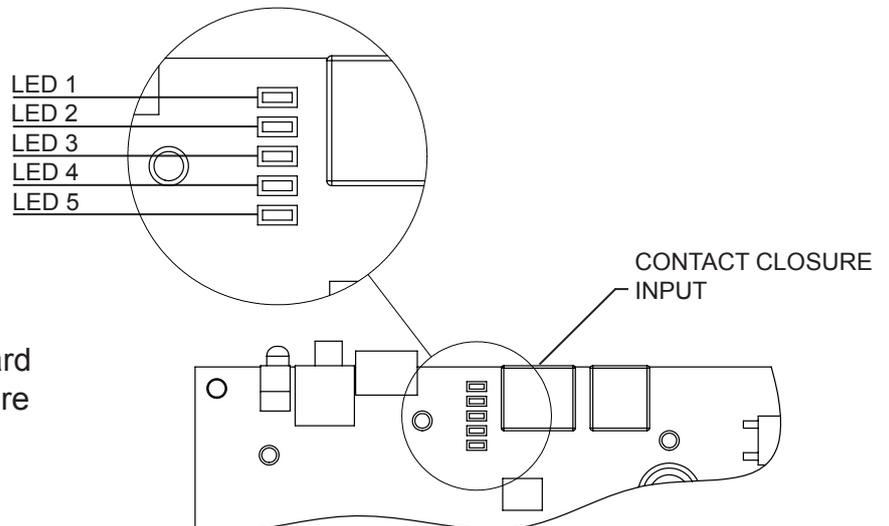


PLS - Plasma Lift and Swivel



RS232

- Use an RJ25 connector in the socket marked RS232 on the control box to operate using RS232

Pin 1: TX
Pin 6 : RX
Pin 3 & 4: GROUND

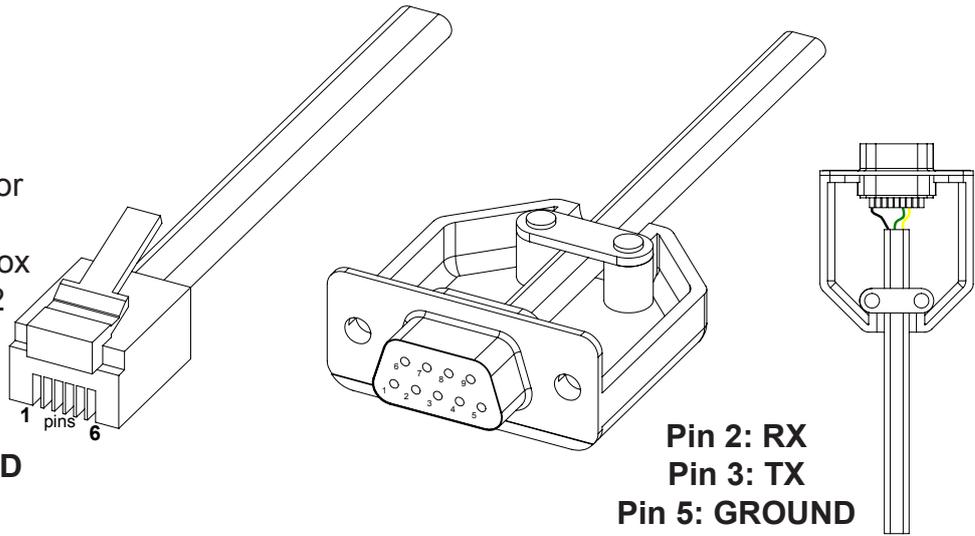

Pin 2: RX
Pin 3: TX
Pin 5: GROUND

Details

Baud rate: 9600
 Stop bit: 1
 Parity: None
 Databits: 8

RJ25		9 PIN D
PIN 1: TX	TO	PIN 2: RX
PIN 6: RX	TO	PIN 3: TX
PIN 3: GROUND	TO	PIN 5: GROUND
PIN 4: GROUND	TO	PIN 5: GROUND




IMPORTANT

Ensure protocol is entered exactly as written, including Carriage Return (Enter / ASCII 13).

PROTOCOL	ACTION
fa_in Carriage Return (Enter ↵)	Device IN
fa_out Carriage Return (Enter ↵)	Beam OUT no movement to swivel
fa_right Carriage Return (Enter ↵)	Device OUT RIGHT limit
fa_left Carriage Return (Enter ↵)	Device OUT LEFT limit
fa_preset Carriage Return (Enter ↵)	Device to PRESET memory position
fa_a Carriage Return (Enter ↵)	Device OUT to memory position a
fa_b Carriage Return (Enter ↵)	Device OUT to memory position b
fa_c Carriage Return (Enter ↵)	Device OUT to memory position c
fa_stop Carriage Return (Enter ↵)	STOPS the device at any position

Operation Details

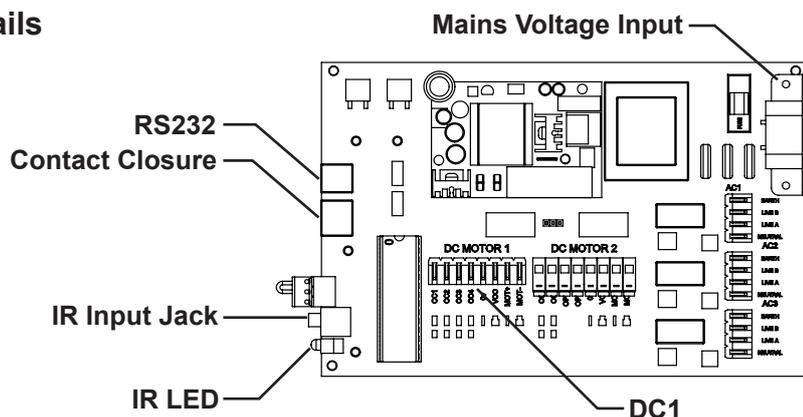

DC1

Low voltage power output for motor drive. LED's to show operation of limit switches and positional counters

PLS - Plasma Lift and Swivel



Operation buttons for the IR remote


In - Brings the mechanism into the cabinet

Preset - Screen goes to learnt position

Store - Programs current screen position to learnt position

Out - Brings the mechanism out of the cabinet facing forward

Stop - Will stop the operation at any position

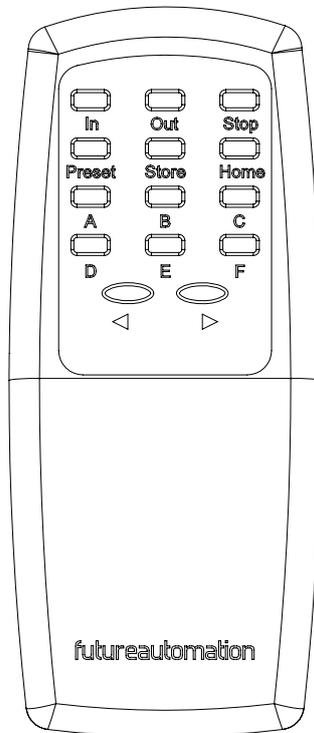

Home - Takes screen to forward facing position when screen is already in an angled position

< - Rotates Screen left

> - Rotates Screen right

Store + Preset - Within 1 sec stores preset position

Store + E - Within 1 sec clears preset and sets swivel 180 degree right and left

Store + D - Within 1 sec sets left limit

Store + F - Within 1 sec sets right limit

Store + A-C - Stores other positions A-C then takes it to those positions




Note

Only buttons indicated are functional with the product. Any button pressed when in motion mechanism will stop.

Replacing batteries



Future Automation IR Remote Controller needs x2 AAA batteries which are provided within the packaging

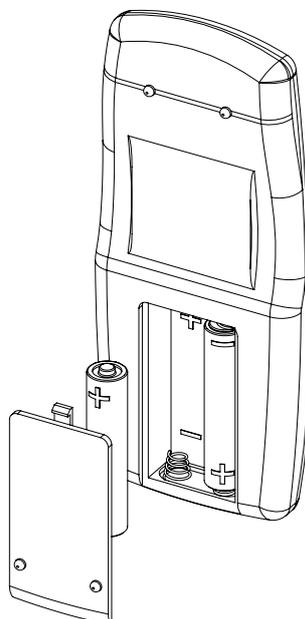

PLS - Plasma Lift and Swivel



Plasma Lift Swivel - Trouble shooting guide

Lift Mechanism PLS - Trouble shooting

For information on our products please refer to our web site -
www.futureautomation.co.uk
or for questions on installations and our product range please
phone us on - **+44(0) 1438 833577** and ask for our technical
support department

PLS - Plasma Lift and Swivel



Technical Overview

A general technical overview of the PLS lift mechanism

	PLS	
Product Dimensions	Custom	
Weight	Custom	
Power Consumption	250W - 500W	
Power Consumption On Standby	100mA	
Lifting Capacity (Kg)	50Kg [110.2lb]	
Max Rotation Swivel	Right - 180°	
	Left - 180°	
Standard Screen Mount Colour	Black	
Max Television Size	Width - N/A	
	Height - N/A	
	Depth - 155mm [6.1"]	
Control	IR Remote, RF Remote, Contact Closure & RS232	
Power Supply	240V or 110V	
Control Of 3rd Party Product	Yes	
Output Power Supply	Yes (12V)	
Control Box Size (W,D,H)	152x200x55mm [6x7.9x2.2"]	
Shipping Details		
	Dimensions Approx (W,D,H)	1800x500x1200mm [70.9x19.7x47.2"]
	Weight Approx (Kg)	50 - 60Kg [110.2 - 132.3lb]

PLS - Plasma Lift and Swivel



Notes...



Future Automation

Unit 2 Kimpton Enterprise Park
Claggy Road
Kimpton
Hertfordshire
SG4 8HP
United Kingdom

Tel: +44 (0) 1438 833 577

Fax: +44 (0) 1438 833 565

Email: info@futureautomation.co.uk

www.futureautomation.co.uk