




future automation

AL965

TV ACTUATOR LIFT 50" - 65"

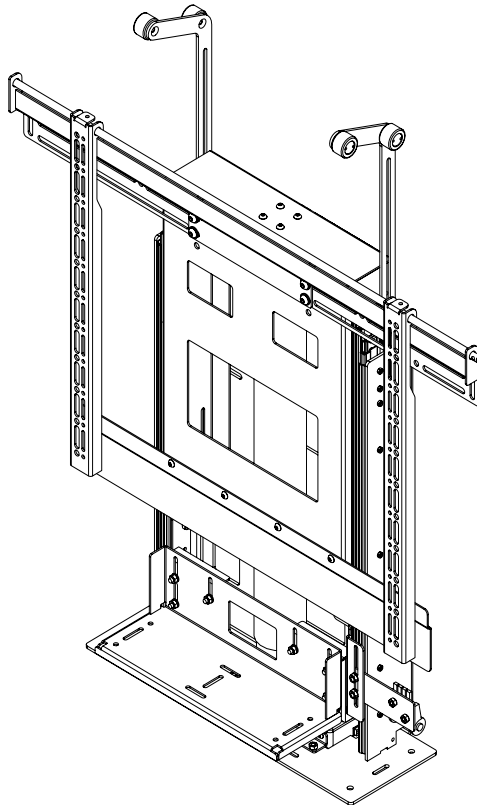

INSTALLATION INSTRUCTIONS

ISSUE 015

SAFETY DISCLAIMER

IMPORTANT SAFETY INSTRUCTIONS BELOW

WARNING: Failure to provide adequate structural strengthening, prior to installation can result in serious personal injury or damage to the equipment. It is the installer's responsibility to ensure the structure to which the component is affixed can support four times the weight of the component and any additional apparatus mounted to the component.

WARNING: Do not exceed the weight capacity for this product as listed below. This can result in serious personal injury or damage to the equipment. It is the installer's responsibility to ensure that the total combined weight of all attached components does not exceed that of the maximum figure stated.

WARNING: Risk of death or serious injury may occur when children climb on audio and/or video equipment or furniture. A remote control or toys placed on the furnishing may encourage a child to climb on the furnishing and as a result the furnishing may tip over on to the child.

WARNING: Risk of death or serious injury may occur. Relocating audio and/or video equipment to furniture not specifically designed to support audio and/or video equipment may result in death or serious injury due to the furnishing collapsing or over turning onto a child or adult.



WARNING – RISK OF INJURY!



Only for use with equipment weighing **88LBS (40KG) OR LESS.**

Use with heavier projectors/equipment may lead to instability causing tip over or failure resulting in death or serious injury.

Bracket Suitable for Residential and Commercial Use.

ADDITIONAL WARNINGS:

1. Keep all documentation/instructions after fitting.
2. Read all technical instructions fully before installation and use. It is the installer's responsibility to ensure that all documentation is passed on to the end user and read fully before operation.
3. Do not use near water or outdoors unless the product has been specifically designed to do so.
4. Protect any cables or cords being used near this bracket from being walked on or pinched to prevent damage and risk of injury.
5. Use this product only for its intended purpose as described in the product instructions and only use attachments/accessories specified by the manufacturer.
6. Do not operate the product if it is damaged in any way, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped. Contact the original installer/manufacturer to arrange repair or return.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

1. Clean only with a dry cloth and always unplug any electrical items being used in conjunction with this product before cleaning.

Future Sound & Vision trading as Future Automation intend to make this and all documentation as accurate as possible. However, Future Automation makes no claim that the information contained herein covers all details, conditions or variations, nor does it provide for every possible contingency in connection with the installation or use of this product. The information contained in this document is subject to change without prior notice or obligation of any kind. Future Automation makes no representation of warranty, expressed or implied, regarding the information contained herein. Future Automation assumes no responsibility for accuracy, completeness or sufficiency of the information contained in this document.

PRODUCT WARRANTY & RISK ASSESSMENT

WARRANTY INFORMATION

WARNING - The warranty offered for this product shall be annulled if the product is used improperly or in a way that is in breach of our Terms of Service.

Future Automation provides warranty for the mechanism you purchased for the period of **24 months** from the date of purchase, provided that it isn't used for unintended purposes.

Under the warranty, Future Automation aims to either solve the issue remotely (via telephone or email support) or if the mechanism requires a part, arrange a visit to your premises by a Future Automation approved engineer or send replacement items where appropriate.

Warranty repairs will be carried out as quickly as possible, but subject to parts availability. This warranty period is respectively extended for the period of a repair.

A malfunctioning product must be cleaned and placed into suitable packaging to protect against transit damage before organising delivery to a repair workshop.

All the complaints about defects must be submitted to the vendor/installer that sold this product, rather than directly to the manufacturer.

Any part of your system that needs to be replaced during a warranty repair becomes the property of Future Automation.

The warranty does not cover the following:

- Damages resulting from improper product use or maintenance.
- Repairs carried out by unauthorized persons.
- Natural wear and tear during operation.
- Damages caused by the buyer.
- Accidental damages caused by a customer or damages caused as a result of careless attitude or usage, or damages caused by natural disasters (natural phenomena).
- Any electrical, or other environmental work external to your Future Automation mechanism including power cuts, surges etc.
- Additional items not supplied by Future Automation although they may have been supplied together by the retailer
- Any 3rd party software products controlling your mechanism
- Any transfer of ownership. Warranty is provided only to the initial purchaser.
- Compensation for loss of use of the product, and consequential loss of any kind.

A separate Safety and Servicing Information document is provided with these instructions (additional copies can be found at www.futureautomation.co.uk/safety), and this document **MUST** be filled out by the approved Future Automation Dealer who is installing the product. This Warranty Sheet must be held by the end user for the duration of the products life and will be referred to during servicing or warranty queries.

The Safety and Servicing Information document also contains two Service History Forms that must be filled in by the approved Future Automation dealer who is performing the first required yearly service of this product.

One copy of the Service History Form must be held by the customer (along with the Warranty Sheet) and a duplicate copy must be held by the approved Future Automation dealer that performed the service. Missing and/or mismatching documents may delay or invalidate warranty claims.

Additional Service History Forms can be found on the Future Automation website for further yearly services.

RISK ASSESSMENT INFORMATION

It is the installer's responsibility to perform a risk assessment of installed products. Future Automation can provide guidelines to installers/dealer about what should be included in a risk assessment, but due to the individual nuances of each location/site, Future Automation cannot provide a full list of areas to risk assess.

For full risk assessment and safety information please view our Safety and Servicing guide available at www.futureautomation.net/safety

GUIDE

CONTENTS

SAFETY DISCLAIMER	1
PRODUCT WARRANTY & RISK ASSESSMENT	2
GUIDE CONTENTS	3
PACKAGE CONTENTS	4
MECHANISM QUICK-START GUIDE	5
INITIAL OPERATION	6
CABINET MOUNTING	7
SCREEN BRACKET FITTING	8
SHELF FITTING	9
SCREEN ALIGNMENT	10
SCREEN MOUNTING	11
PUSH BAR ADJUSTMENT	12
FINAL CHECKS	13
GENERAL CONTROL	14
INFRARED (IR)	15
RADIO FREQUENCY (RF)	16
CONTACT CLOSURE	17
RS232 CONTROL	18

PACKAGE CONTENTS

1 - AL965

- 1.1 - BASE PLATE
- 1.2 - LINEAR ACTUATOR
- 1.3 - BASE SHELF BRACKET
- 1.4 - PUSH BARS (X2)
- 1.5 - FIXED FLAP MOUNTING BRACKET (X2)
- 1.6 - FIXING PLATE
- 1.7 - UPRIGHT SUPPORT BRACKET

2 - FB49

- 2.1 - UPRIGHTS (X2)
- 2.2 - UPRIGHT MOUNTING BRACKET
- 2.3 - LOCKING BAR



3 - CONTROL BOX

4 - IR REMOTE

ITEMS NOT SHOWN ON PAGE

AL965 ACCESSORY PACK:

- X2 AAA BATTERIES
- MULTI-PACK OF NUTS, BOLTS AND WASHERS
- MAINS POWER, IR AND CONTACT CLOSURE LEADS

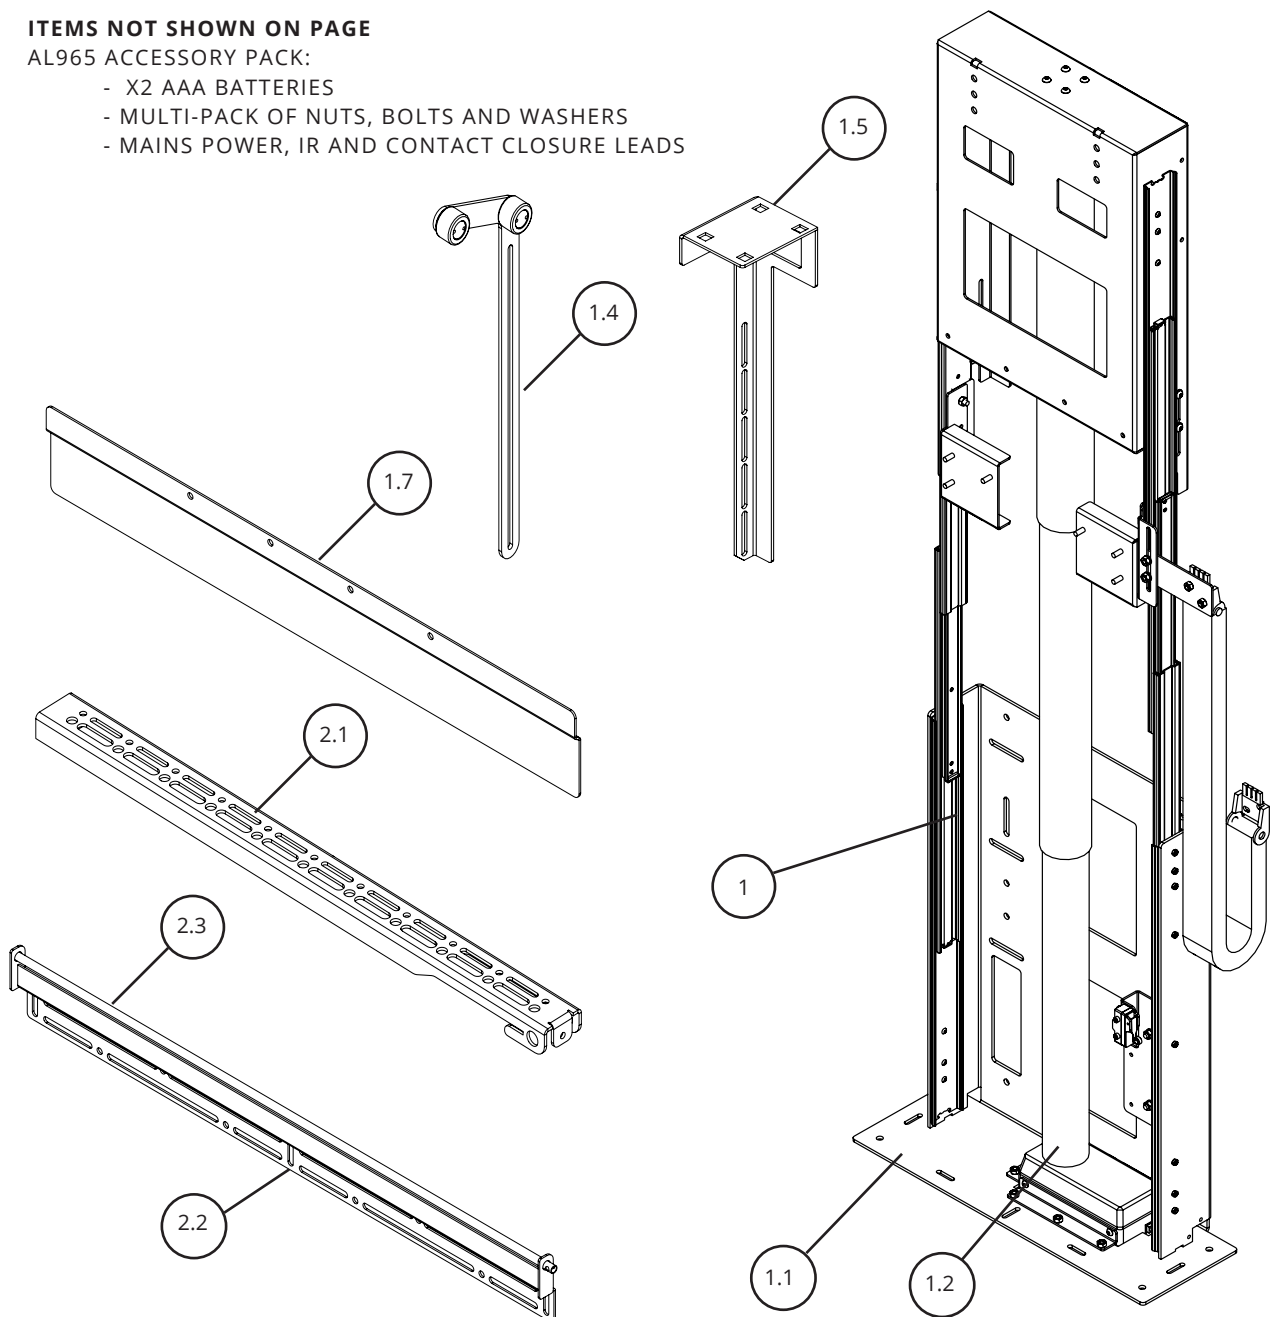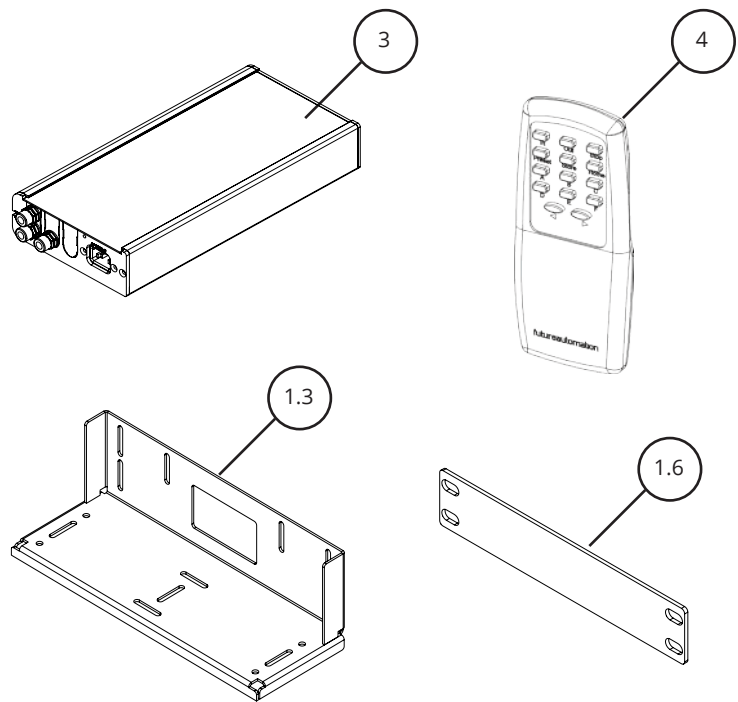

MECHANISM QUICK-START GUIDE

Some Future Automation mechanisms may ship with the control box disconnected to prevent damage during transit. In order to operate the mechanism, the control box will need to be reconnected, then have mains power applied along with the desired control method.

RECONNECTING THE CONTROL BOX

To reconnect the mechanism control box, follow the below steps:

1. Make sure the power is disconnected from the control box.
2. Remove the retaining screw and washer from the end of the control box to allow removal of the control box lid. (Image 1 Below).
3. Slide off the control box lid to reveal the control board inside.
4. Locate the green connector on the end of the loom leading from the lift mechanism. This plug will have a small tag attached stating the correct connecting socket on the control board (e.g. "AC1", "DC2"...) (Image 2 Below).
5. Plug the green connector into the corresponding socket on the control board. This plug is handed and will only connect correctly one way. Do NOT force the connector into the socket, this can cause serious damage to the control board and mechanism.
6. Route the wiring loom out of the end of the control box by inserting the black plastic inserts into the slots provided. (Image 3 Below).
7. Slide the control box cover back over the control board and replace the fixing screw and washer.



Image 1.

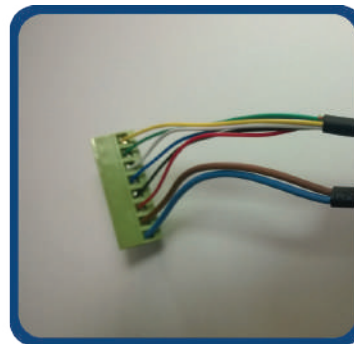


Image 2.



Image 3.



Image 4.

IMPORTANT

For the mechanism to operate, the green three way safety connector with the loop of wire attached, must also be plugged into the end of the control box. (Image 4 above). If this connector is not plugged in, a bright red LED will be visible inside control board and the Input Confirmation Input LED will be permanently illuminated.



INITIAL OPERATION

1

- Unpack and check the mechanism fully for any damage or obvious visual faults before operation.

2

- Test the mechanism by running it fully up and down once (refer to the mechanism control section of the instructions for more details)

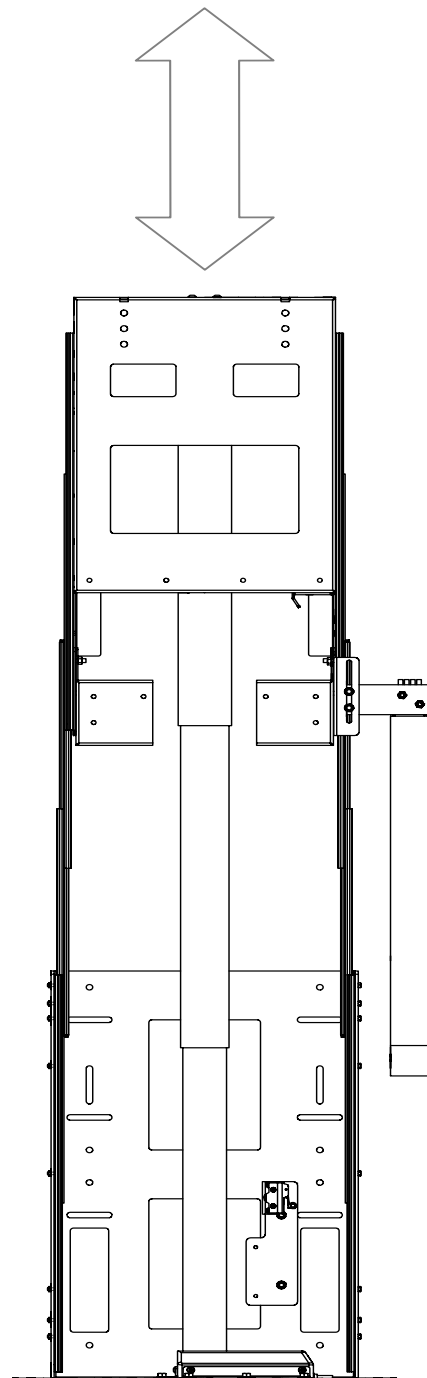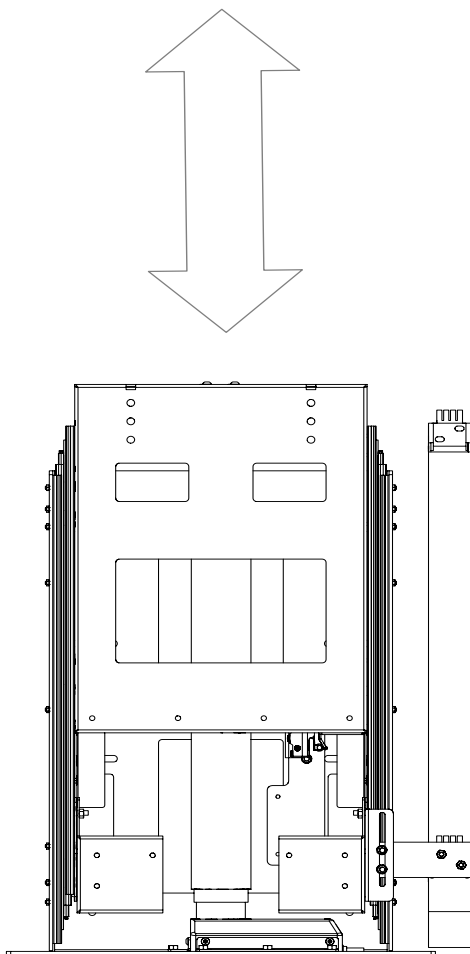

CABINET MOUNTING

1


- Double check the cabinet measurement against the latest AL965 technical sheet

2

- Place the AL965 mechanism into the cabinet and fix down via the bottom and rear fixing holes indicated below (fixings not supplied).

3


- Secure the AL965 cable management chain to the rear of the cabinet (fixings not supplied).

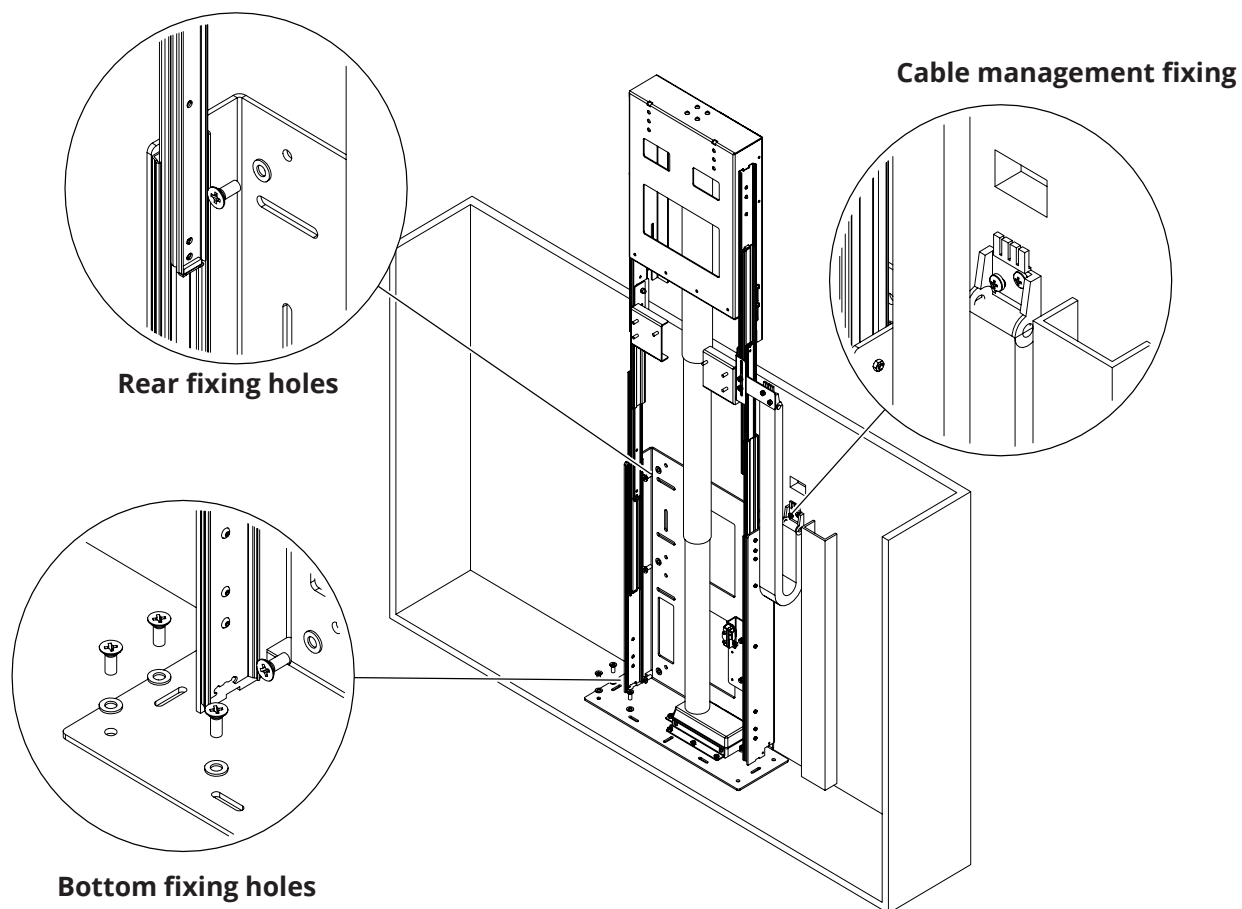

SCREEN BRACKET FITTING


1

- Located the push rollers on the side of the main body, and fix in place using the supplied countersunk washers and M6 x 12mm countersunk bolts. Follow the same process for mounting the fixed flap brackets.

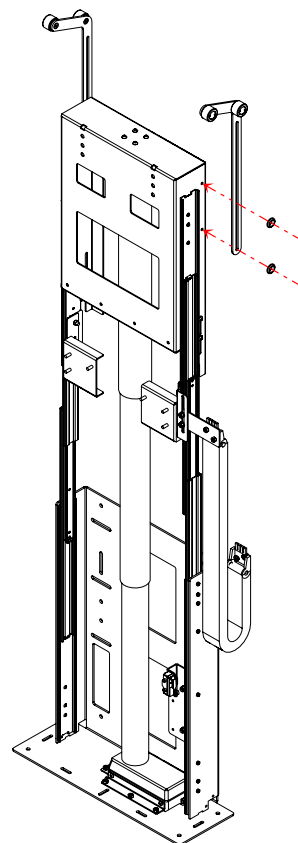

Upright mounting bracket

Fixing plate

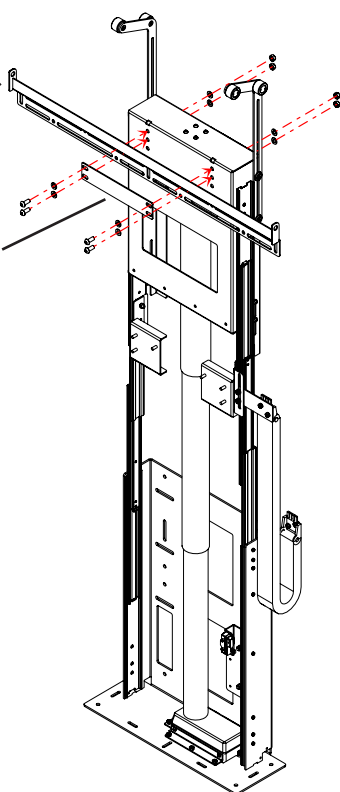


2

- Using the supplied fixing plate, mount the upright mounting bracket centrally on to the lift mechanism as shown. Use M8 x 20 button head bolts, washers, and nuts supplied to fix in place.

3

- Attach upright support bracket using x4 M6x12 button head bolts and nuts.

Upright support bracket



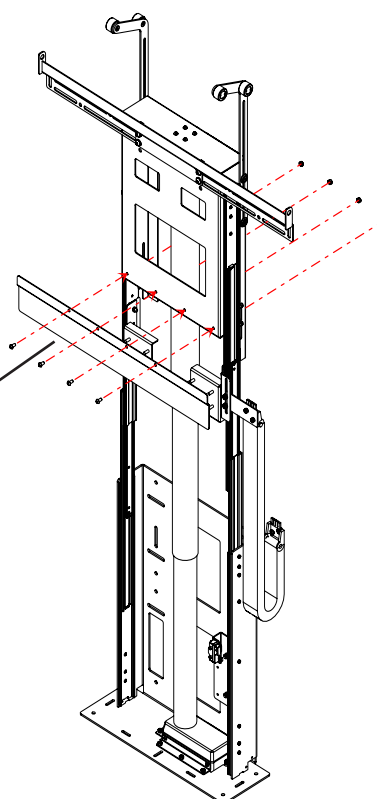


SHELF FITTING

1

- Mount and fix the base support bracket with x6 of the M8 nuts and washers provided.

Note: the bracket can be adjusted upwards and or downwards to the desired location once the base shelf is fitted.

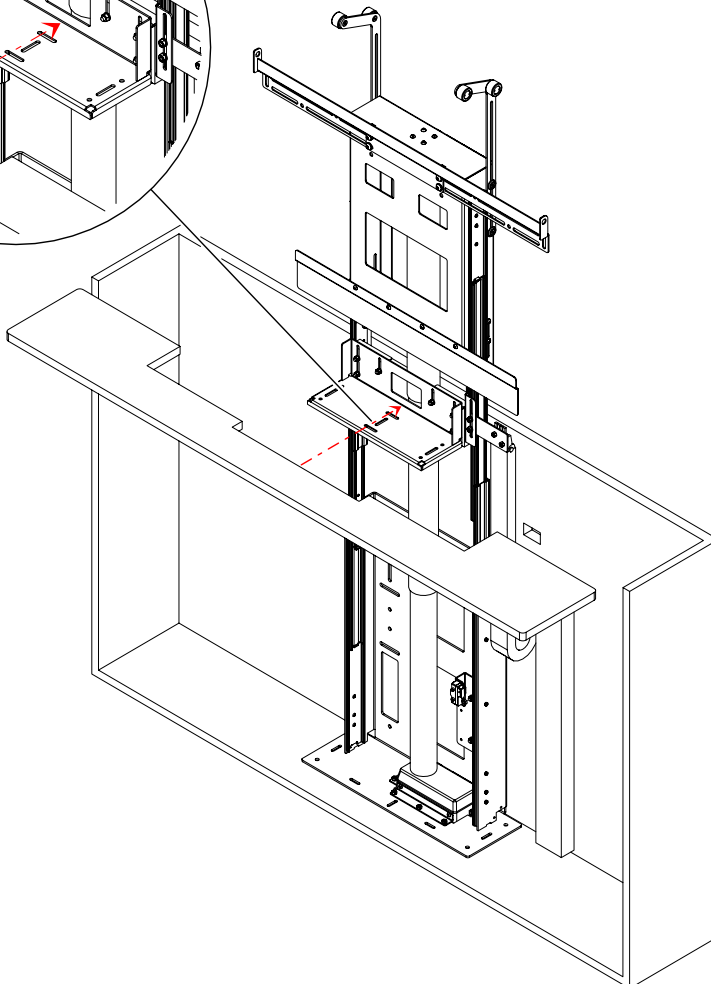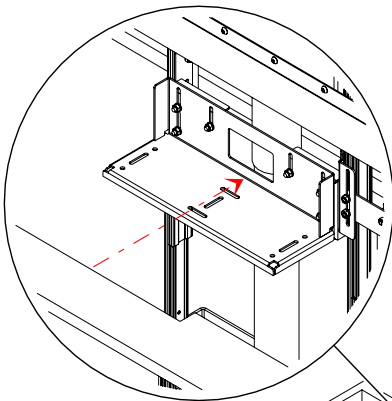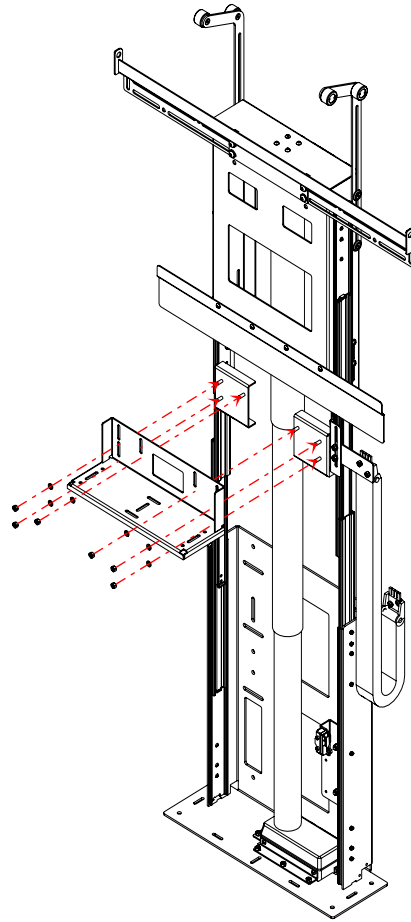

2

- Check the base shelf dimensions against the latest AL965 technical sheet.

3


- Place the base shelf onto the shelf bracket and fix from the underside (fixings not provided).

SCREEN ALIGNMENT

1

- With the mechanism in the IN position, offer the screen up to the AL965 and position it so that the top of the screen sits at least 5mm [3/16"] below the underside of the cabinet lid.
- Follow the instructions in step 2 if the height of the upright mounting plate needs adjusting.


Note this dimension for upright mounting location on screen

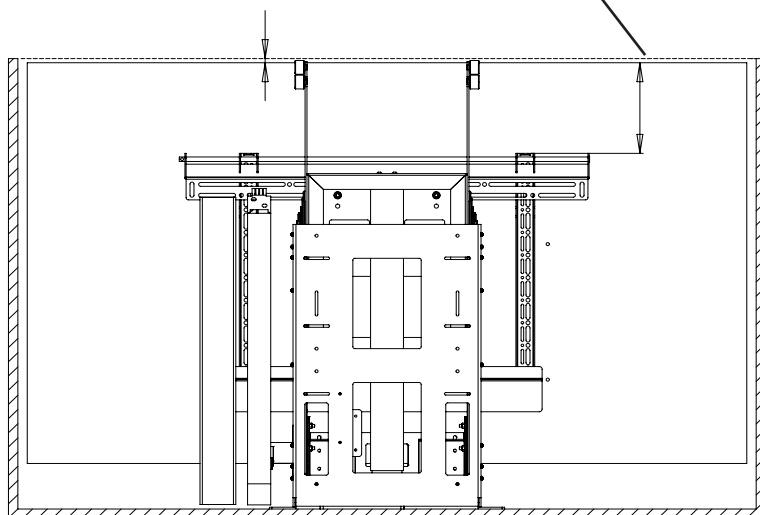


2

- The upright mounting bracket can be set up in a high or low position
- Determine which position the bracket needs to be located, and fix in position using the appropriate fixings (see page 8).

High position

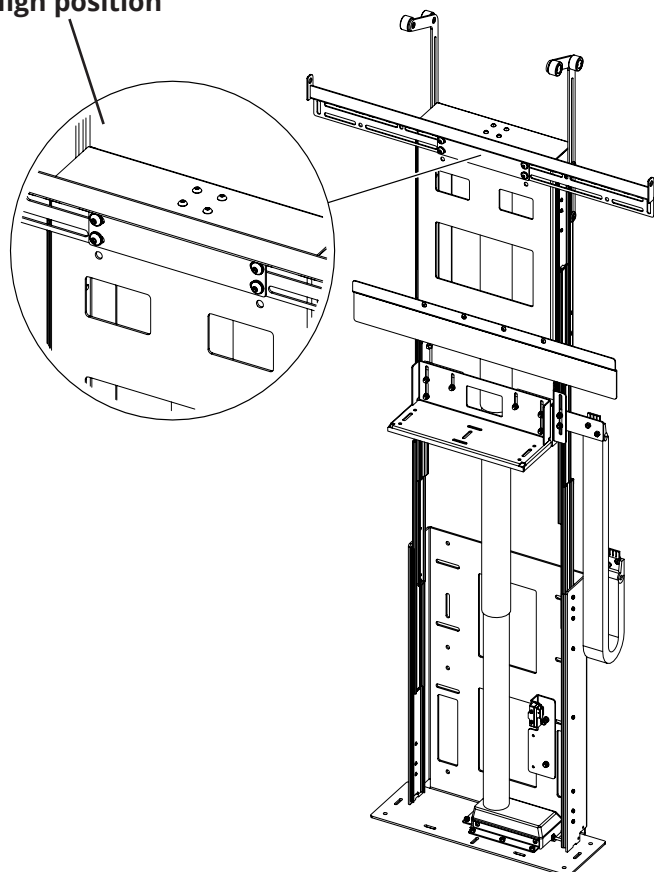

Low position

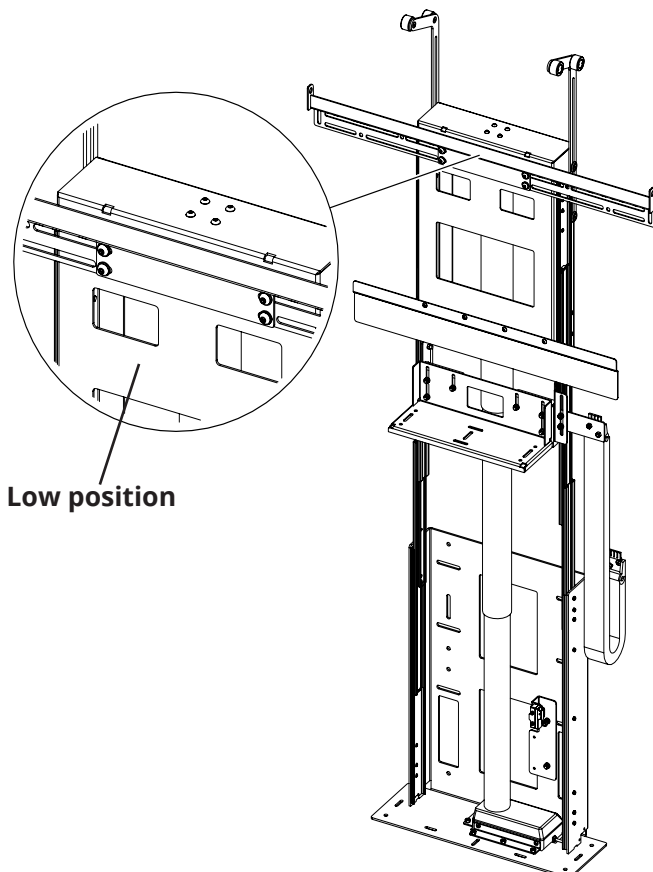


SCREEN MOUNTING

1


- Remove the star nut and insert the supplied rubber buffer into the screen upright and use the M5 half nut to lock it in place (repeat this for the other upright).
- Lay the screen down on a safe surface and place the screen uprights on to the screens VESA holes.
- Secure in place using the fixings in the provided fixings pack.

NOTE: Screens with recessed mount holes or uneven backs may require the use of the supplied spacers.

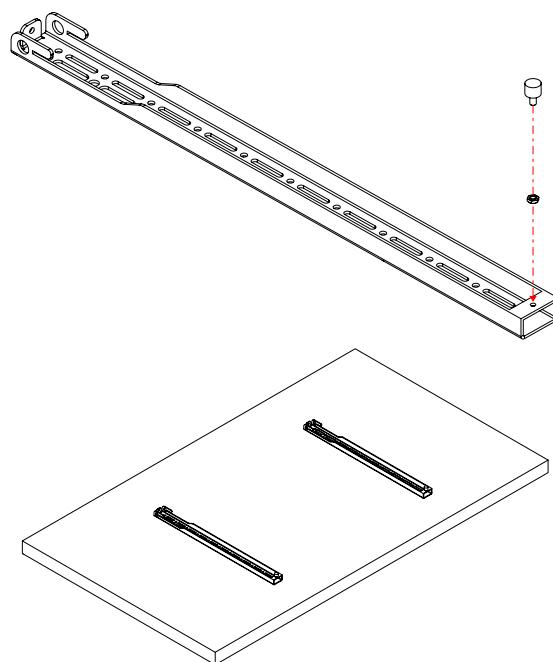

2



- Once the screen uprights are attached to the back of the screen, hook the screen on to the upright mounting bracket.
- Insert the locking bar through the holes on the upright support bracket and uprights themselves. The locking bar can be fixed by using a padlock through the hole at the end of the bar.
- To lock the uprights in place, insert the supplied M6 set screws into the top of the uprights and tighten.

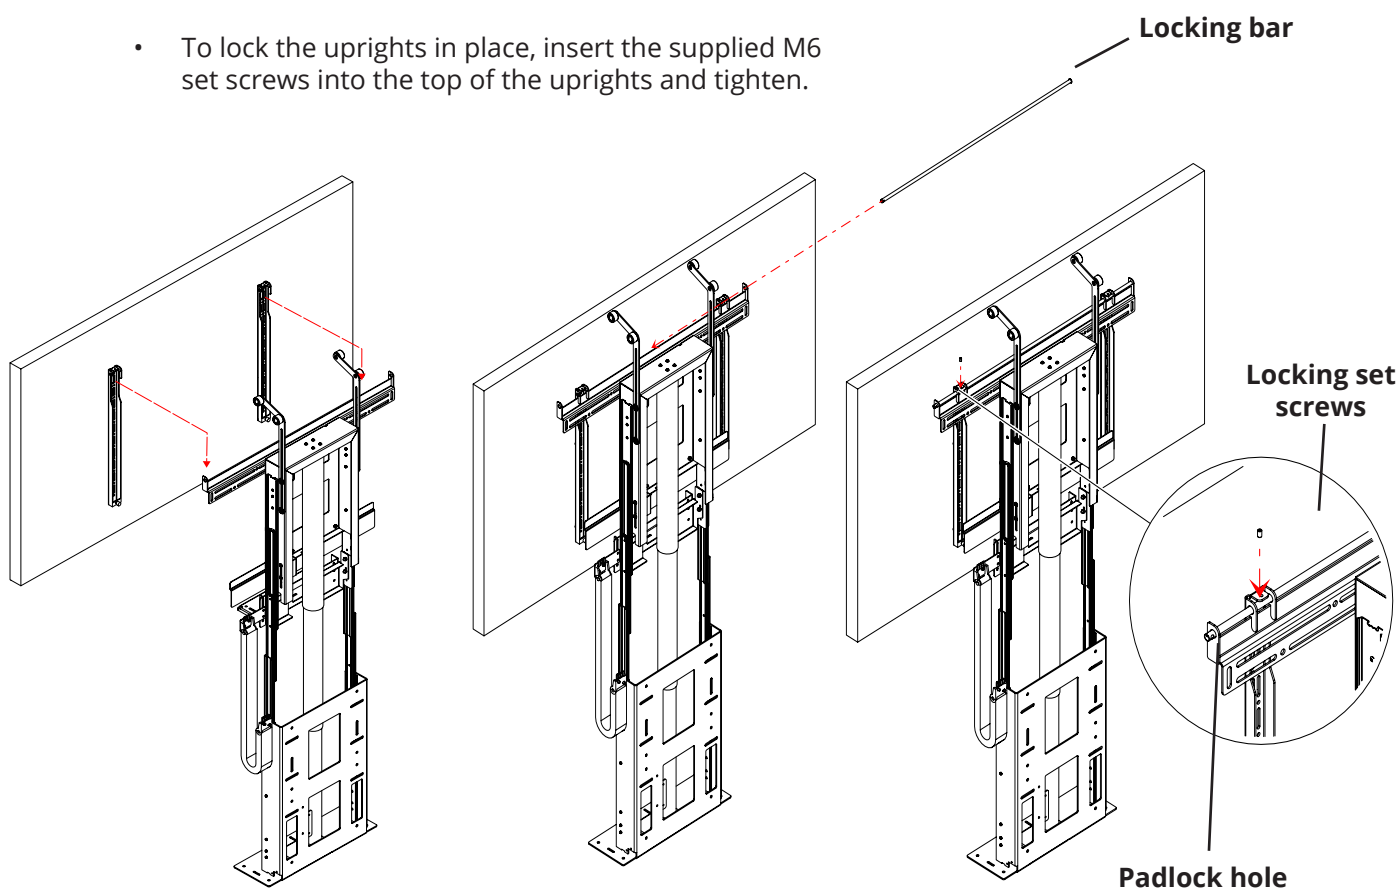

PUSH BAR ADJUSTMENT

1

- When the mechanism opens, the push bar should be in contact with the flap at all times
- The flap should not open past 90°.
- Instructions for adjusting the push rollers can be found below.

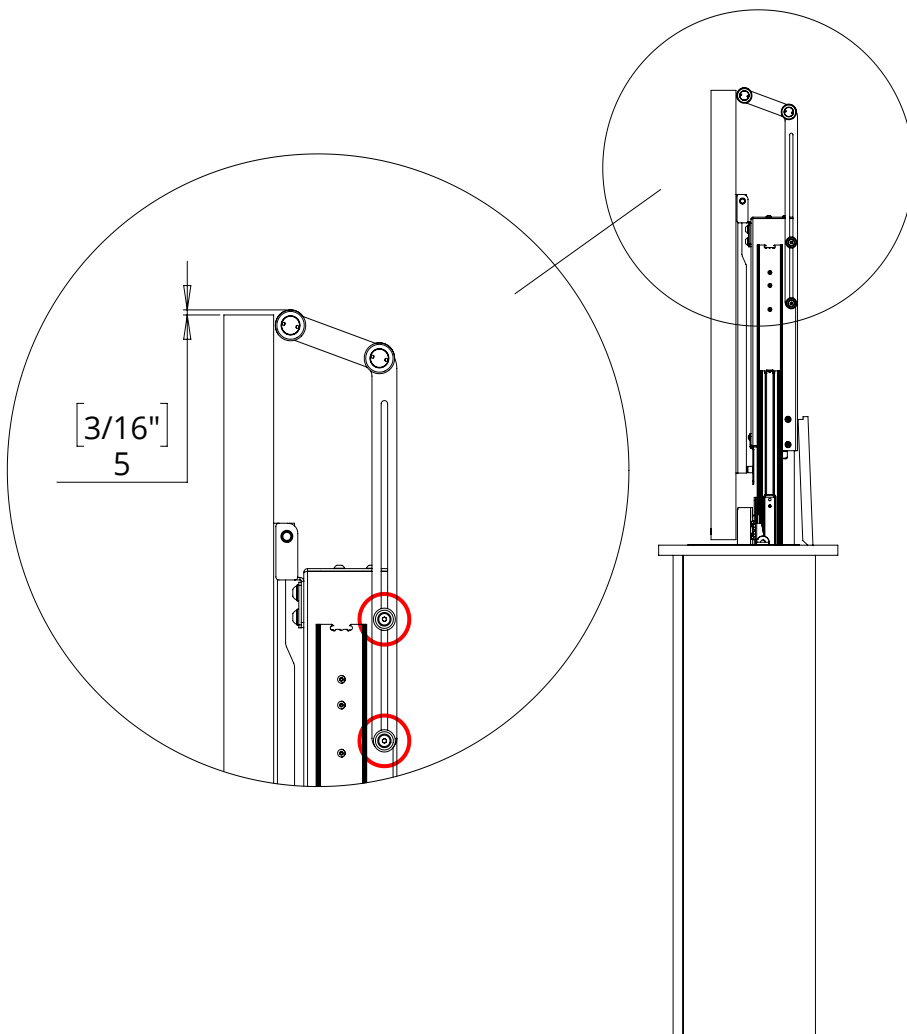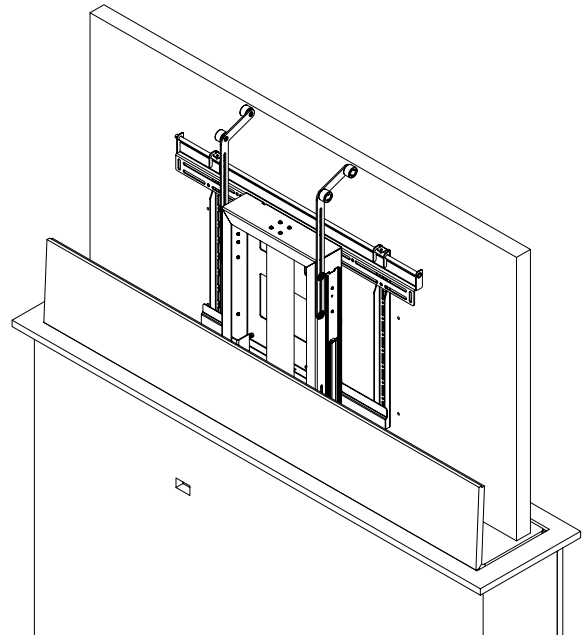

2

- To adjust the push roller height, loosen the 2 bolts circled, then slide the push bar up or down. Tighten the 2 bolts again to secure in place.
- There should be a minimum of 5mm $\left[\frac{3}{16} \right]$ " difference between the top of the screen and the top of the push rollers.

FINAL CHECKS

1


- Make sure the AL965 opens and closes fully without any interference from the cabinet.

2


- Make sure the flap opens and closes smoothly and the push rollers contact the flap correctly.

3

- Make sure the flap doesn't open past 90°.

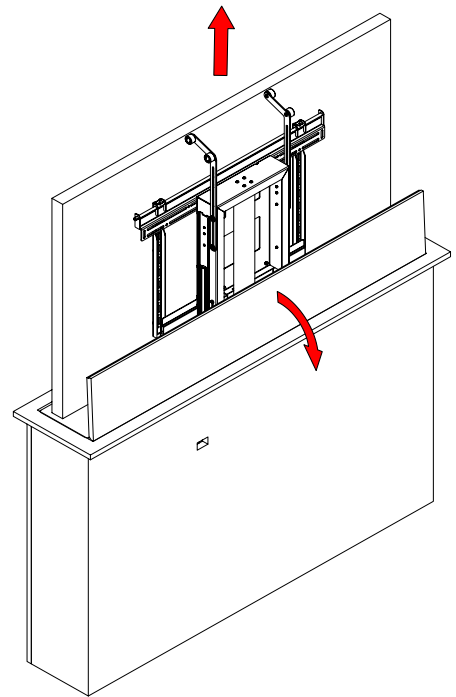


The mechanisms movement should look like the image below:

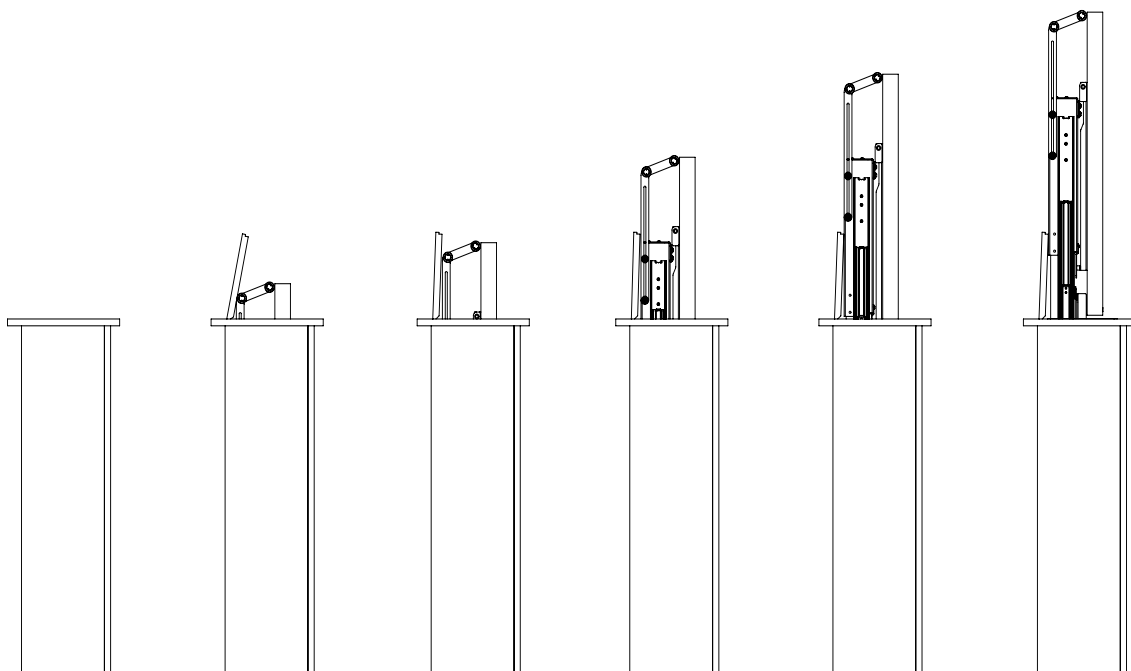

GENERAL CONTROL

This mechanism has multiple standard control methods, each of which requires a different input method to the control box. For ease, the input sockets on the control board are labelled below.
(Control box size and style may vary to image shown)

CONTROL BOX INPUTS

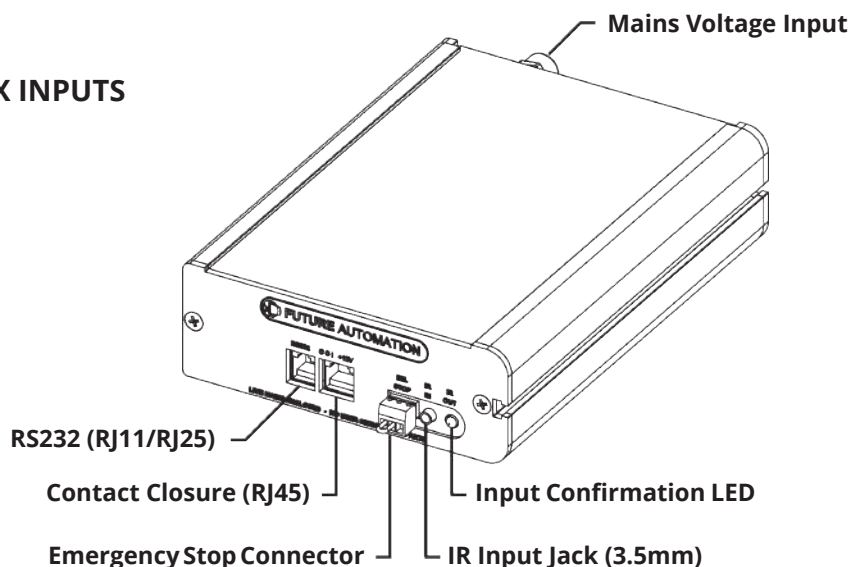


MECHANISM EMERGENCY STOP CONNECTOR

This mechanism features an Emergency Stop Connector, which **MUST** be plugged into the control box in the connector labelled above for the mechanism to operate. If this connector is not plugged in, the Input Confirmation LED will be permanently lit. As per the red plastic tag attached to the Emergency Stop Connector (and shown below), the small loop of wire in this connector is designed to be replaced by a third party safety mechanism.



REPLACING MECHANISM BATTERIES

The standard Future Automation Infrared (IR) remote control required x2 AAA batteries to operate. These are provided with the mechanism in the Accessories Pack. These batteries can be replaced as the per the image below.

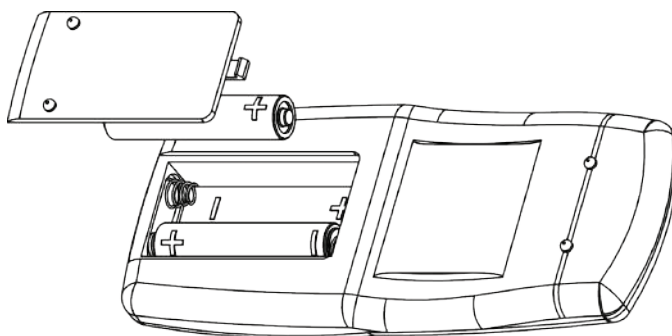

INFRARED (IR)

This mechanism can be controlled via the supplied 14 button Infrared (IR) Remote Control, paired with the supplied Infrared (IR) lead and sensor.

The mechanism's functions can be controlled by plugging the Infrared (IR) lead and sensor into the 3.5mm IR Input Jack shown on the General Mechanism Control page.

Confirmation of Infrared (IR) input will be shown by a single flash of the large green LED located on the end of the control box.

As Infrared (IR) control works over line of site, the Infrared (IR) sensor must be directly viewable from what ever location the remote control is being used from.

Infrared (IR) Remote Control Button Layout

IN - Brings the mechanism into the cabinet.

OUT - Brings the mechanism out of the cabinet to the programmed OUT position.

(If no OUT position has been programmed, the mechanism will raise to its maximum OUT position)

STOP - Will stop the operation of the mechanism at ANY position.


Storing Positions

STORE -> OUT - Pressed sequentially within 2 seconds of each other. Set current mechanism height as OUT position.

(Mechanism will begin to close automatically and must fully close to set this position. Any interruption will cancel the process)

NOTE - Mechanism must remain on IN switch for minimum of 3 seconds in order to set position.

STORE -> STOP -> OUT - Pressed sequentially within 2 seconds of each other. Clear current mechanism OUT position.

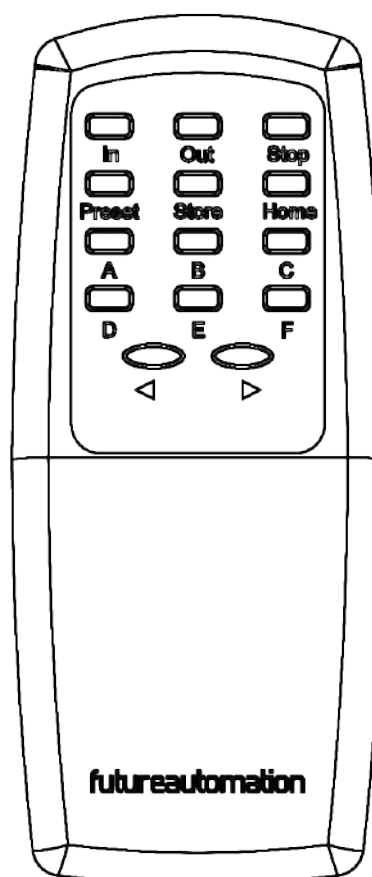

IMPORTANT

Only buttons indicated above are functional with the product. Any other button press will STOP the mechanism.

RADIO FREQUENCY (RF)

If purchased with the Radio Frequency (RF) control option, this mechanism can be controlled via the supplied 4 button Radio Frequency (RF) Remote Control, paired with the in-built Radio Frequency (RF) sensor.

Confirmation of Radio Frequency (RF) input will be shown by a single flash of the large green LED located on the end of the control box.

Radio Frequency (RF) control does not require line of site, but signal can be affected by cabinet thickness, cabinet material or other electronic signals (i.e. strong WIFI signals).


Radio Frequency (RF) Remote Control Button Layout

IN - Brings the mechanism into the cabinet.

OUT - Brings the mechanism out of the cabinet, without swivelling.

STOP - Will stop the operation of the mechanism at ANY position.

STOP - Will stop the operation of the mechanism at ANY position.

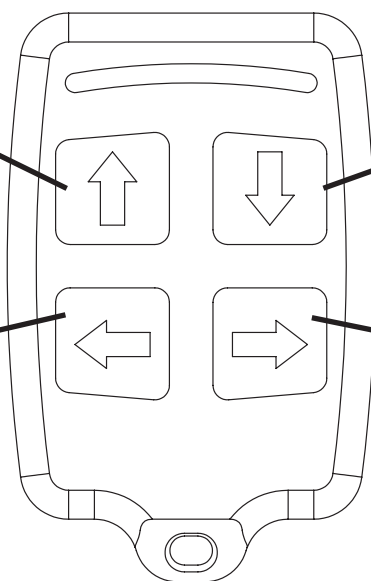

The Radio Frequency (RF) Remote Control can only be used to recall the above functions.


The mechanism limits and preset positions must be programmed using the supplied Infrared (IR) Remote Control.

IMPORTANT

Pressing any button while the mechanism is moving will STOP the mechanism.

Mechanism Output Power Supply

It is possible for the power to the screen to be switched by the control box. Use this connector to take power to the screen.

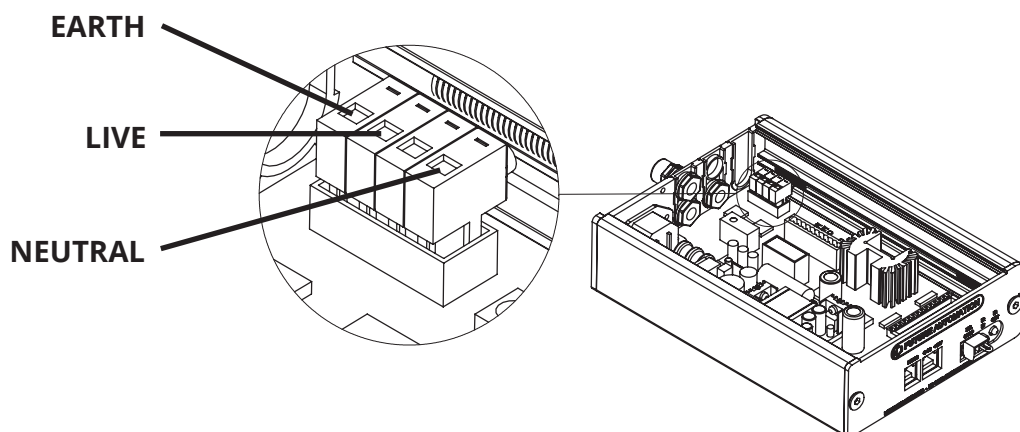


CONTACT CLOSURE

This Mechanism can be controlled via Contact Closure, utilising an 8 Pin RJ45 Connector attached to a length of CAT5 (Type 568A or 568B) cable.


The mechanism's functions can be controlled by plugging this into the RJ45 port on the mechanism control board, then shorting pins 1-8 on this connector as shown in the Contact Closure Input Table below.

Confirmation of Contact Closure input will be shown by a single flash of the large green LED located on the end of the control box, as well as illumination of the corresponding Contact Closure LED on the printed circuit board as shown below.

RJ45 PIN LAYOUT

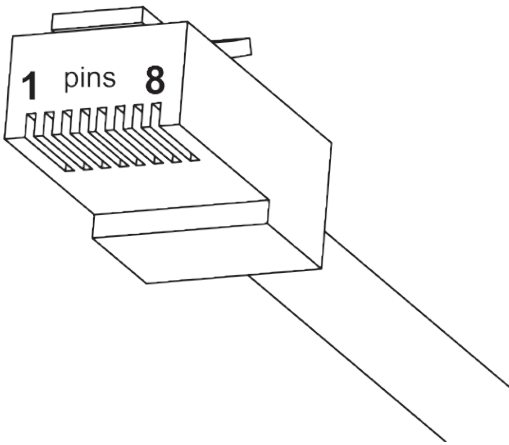

CONTACT CLOSURE LED LAYOUT

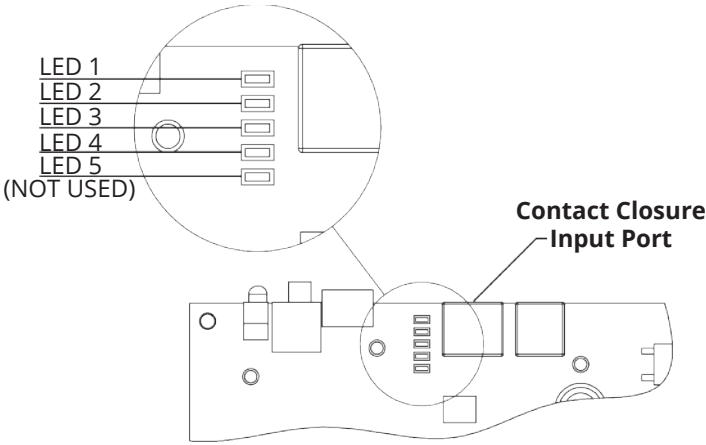

CONTACT CLOSURE INPUT TABLE

PIN	DESCRIPTION	ACTION
1	12V SUPPLY	12V SUPPLY - CURRENT LIMITED
2	12V LATCH	WHEN 12V ATTACHED, DEVICE WILL GO OUT TO PRESET POSITION. WHEN 12V REMOVED, DEVICE WILL GO IN.
3	GROUND	GROUND
4		
5	DEVICE LATCH	SHORT TO GROUND (PIN 3), DEVICE WILL GO OUT TO PRESET POSITION, REMOVE SHORT DEVICE WILL GO IN.
6	DEVICE STOP	MOMENTARY SHORT TO GROUND (PIN 3), STOPS DEVICE IN CURRENT POSITION.
7	DEVICE OUT	MOMENTARY SHORT TO GROUND (PIN 3), MAKES DEVICE GO OUT.
8	DEVICE IN	MOMENTARY SHORT TO GROUND (PIN 3), MAKES DEVICE GO IN.

WIRE/CABLE TYPE		LED INDICATOR
568A	568B	
W G	W O	
G	O	
W O	W G	
B	B	
W B	W B	LED 4
O	G	LED 3
W BR	W BR	LED 2
BR	BR	LED 1

RS232 CONTROL


This Mechanism can be controlled via RS232, utilising a 6 Pin RJ11/RJ25 connector OR 9 Pin Serial connector attached to a length of 6 core cable.

The mechanism's functions can be controlled by plugging this into the RJ11/RJ25 port on the mechanism control box, then inputting the RS232 commands shown in the RS232 Input Table below.

Confirmation of Contact Closure input will be shown by a single flash of the large green LED located on the end of the control box.


RJ11/RJ25 PIN LAYOUT

- PIN 1: RX
- PIN 6: TX
- PIN 3 & 4: GROUND

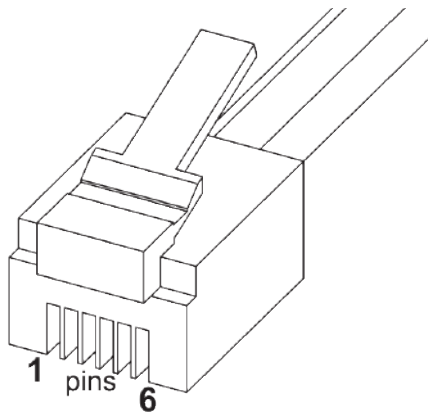

SERIAL PIN LAYOUT

- PIN 2: RX
- PIN 3: TX
- PIN 5: GROUND

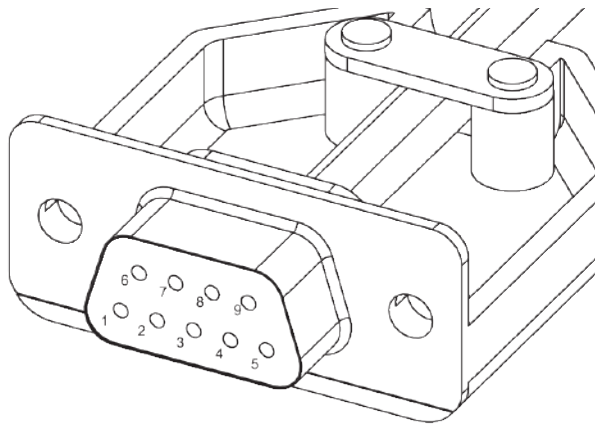

RS232 PROGRAMMING DETAILS

Baud Rate: 9600
Stop Bit: 1
Parity: None
Databits: 8

RJ11/RJ25	Func.	9 PIN Serial	Colour
PIN 1	TX-RX	PIN 2	Blue
PIN 3	GROUND	PIN 5	Green
PIN 4	GROUND	PIN 5	Red
PIN 6	RX-TX	PIN 3	White

RS232 INPUT TABLE

IMPORTANT - Ensure all protocols are entered exactly as written below, including Carriage Return (ENTER / ASCII 13)

Protocol	Action
fa_in Carriage Return (Enter / ASCII 13)	Device IN
fa_out Carriage Return (Enter / ASCII 13)	Device OUT
fa_stop Carriage Return (Enter / ASCII 13)	Device STOP (At any position)

NOTES:

NOTES:

NOTES:



EUROPEAN OFFICE

Address:

Unit 6-8
Brunel Road
Bedford
Bedfordshire
MK41 9TG

Phone: +44 (0) 1438 833577

Email: info@futureautomation.co.uk

Office Hours:

Mon - Fri 8:00 to 17:30 GMT
Saturday & Sunday - Closed

NORTH AMERICAN OFFICE

Address:

Enterprise Park
127 Venture Drive
Dover
NH
03820

Phone: +1 (603) 742 9181

Email: info@futureautomation.net

Office Hours:

Mon - Fri 7:00 to 17:00 EST
Saturday & Sunday - Closed